


● **AL-AEP-SAE**

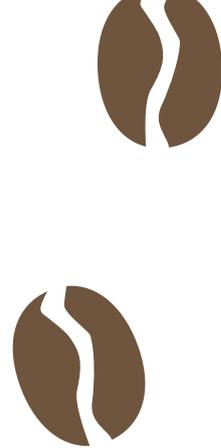

● **SAE DISPLAY**



● **SAE DISPLAY**

**ASD** - AUTOMATIC STEAMER device

**DS** - DRINK SELECTION



ENGLISH



# PERLA

INSTRUCTION MANUAL FOR USER - ENGLISH



---

Read carefully .....	page 4
How to use this manual .....	page 4
General notices .....	page 4
Guarantee .....	page 5
Presentation.....	page 5
Accessories .....	page 6
Softener .....	page 7
Cleaning.....	page 8
Checks and Maintenance .....	page 9
Suggestions on how to obtain a good cup of coffee.....	page 10
List of hazards.....	page 10
<b>PERLA AL-AEP-SAE</b> .....	page 11
<b>PERLA SAE DISPLAY</b> .....	page 21
<b>PERLA SAE DISPLAY with ASD-DS</b> .....	page 31

---

# PERLA

INSTRUCTION MANUAL FOR USER / ENGLISH

---

## READ CAREFULLY

all parts of this manual before using the product.

The espresso coffee machine that you have purchased has been designed and manufactured with innovative methods and technology which ensure long lasting quality and reliability.

This booklet will guide you in discovering the advantages of purchasing this product. You will find notes on how to get the best out of your machine, how to always keep it efficient and what to do if you come up against any difficulties.

Keep this booklet in a safe place. If you lose it you can ask the manufacturer for another copy.

ENJOY YOUR READING ... AND YOUR COFFEE

---

## HOW TO USE THIS MANUAL

The manufacturer has the right to make any improvements on the product. We also guarantee that this booklet reflects the technical state of the product at the time it is marketed.

We take the opportunity to invite the customers to make any proposals for improvement of the product or the manual.

---

## GENERAL WARNINGS

- After removing the packaging, check the condition of the appliance. If in doubt, do not use it but contact the retailer directly.
- The packaging material must not be left in the reach of children in that they are a potential source of danger. It is advised to keep the packaging until after the guarantee has expired.
- Before using the machine, make sure that the mains voltage corresponds to the information on the data plate of the machine.
- The installation must be done in accordance with the safety standards in force and by qualified and prepared personnel. Incorrect installation may be harmful to people, property or animals.
- This appliance is completely safe only if it is connected to an effective earth system, executed as required by current safety standards. It is important to have compliance with this requirement checked. If in doubt, have the system carefully checked by qualified personnel. The manufacturer cannot be considered responsible for any damage caused by an incorrect grounding device.
- Upon installation of the machine, qualified personnel will be required to install a main switch as required by current safety regulations, with a distance of contact aperture greater than or equal to 3 mm.
- It is not advisable to use extensions or electrical adaptors with multiple outlets. If their use is indispensable only use simple or multiple plug adaptors and extensions which are in accordance with the safety standards in force. Never exceed the capacity value in kW indicated on the simple adaptor or on the extensions and the maximum power value indicated on the adaptor.
- The espresso coffee machine is intended for the preparation of hot beverages such as coffee, tea or warm milk. This appliance is to be used only for its intended purpose. Any other use is considered improper and therefore dangerous. The manufacturer cannot be responsible for any damage caused by incorrect and unreasonable use.
- Before any maintenance deactivate the appliance from the electrical network through the bi-polar switch.
- For daily cleaning follow that which is indicated in this manual.

- When using the electrical appliance several safety standards must be observed :
  - do not touch the appliance when hands or feet are wet or damp;
  - do not use the appliance in bare feet;
  - do not use extensions in rooms where there are showers or baths;
  - do not pull on the power cord to disconnect the appliance from the power outlet;
  - do not leave the appliance exposed to atmospheric agents (rain, sun, etc.)
  - do not allow the appliance to be used by children or incapable people.
- In case of breakdowns or poor functioning turn off the appliance, and unplug it. Do not attempt any repairs; call for specialised technical assistance.
- Any repairs must be done only by the manufacturer or an authorised assistance centre using exclusively original spare parts. If this instruction is not observed the safety of the appliance is compromised and cancels the guarantee.
- The power cord of the appliance must not be replaced by the user. If the cable is damaged turn the machine off and contact only professionally qualified personnel.
- If you should decide not to use the appliance any longer, unplug it and have it drained of water by qualified personnel.
- To guarantee that the machine is efficient for its correct functioning it is indispensable to follow the manufacturer' s instructions, having periodical maintenance and a check of all the safety devices done by qualified personnel.
- Do not expose your hands or other body parts in the direction of the coffee delivery spouts or in the direction of the steam and hot water delivery terminals. The steam and the water that exit the nozzles can cause burns.
- When functioning, the steam and water nozzles and the filter-holder cups are overheated and are to be handled with care only in the indicated parts.
- Cups must be placed on the special cup-heating surface only after having been thoroughly dried.
- The dishes belonging to the machine itself are to be placed on the cup-heater surface. It is incorrect to place any other object.
- Any unauthorised handling of any parts of the machine renders any guarantee null and void.



#### **GUARANTEE**

12 months on all components except electrical and electronic components and expendable pieces.

## **PRESENTATION**

The espresso coffee machine is for strictly professional use. It is designed for the preparation of hot drinks such as tea, cappuccinos and weak, strong and espresso coffee, etc. A range of accessories is available to guarantee practical and functional use of the machine.

If the model has two or more groups it can be used by two or more people simultaneously. This characteristic, together with the fact that the machine is able to deliver drinks continuously without any problems, guarantees its intensive use.

Following are the instructions for correct use of the machine. The various accessories supplied with the appliance will also be examined.



The user must have sufficient instructions to correctly operate the machine. It is recommended not to carry out any operations on the machine which can tamper with or alter its functionality. **WHEN THE MACHINE IS OPERATIVE THE BOILER CONTAINS STEAM AND HOT WATER THAT ARE UNDER PRESSURE.**

## ACCESSORIES

### Cappuccino maker

- Put the suction tube inside the milk;
- place the jug under the spout of the cappuccino maker;
- turn the steam tap counter-clockwise, upon reaching the desired amount, close the steam tap;
- pour the foamed milk into the cups with coffee.



i


To obtain delivery of warm milk without foam, lift the tab (1) upwards. For better results, we suggest not dispensing directly into the coffee cup, but into a jug or pot, then putting the foamed milk with the coffee. Be sure the cappuccino maker is kept clean as described in the chapter "Cleaning".

### Milk foaming nozzle

- Insert the nozzle (A) in the milk so that the sprayer is completely covered;
- turn the steam tap (B) counter-clockwise;
- wait for the milk to heat and foam;
- upon reaching the desired temperature and foaming turn the steam tap (B) clockwise.

To adjust milk foaming proceed as follows:

- Use a wrench to unscrew component (A) of the milk foaming nozzle;
- Use a screwdriver on the screw (D) located inside the part:
  - to reduce foaming turn clockwise
  - to increase foaming turn counter-clockwise

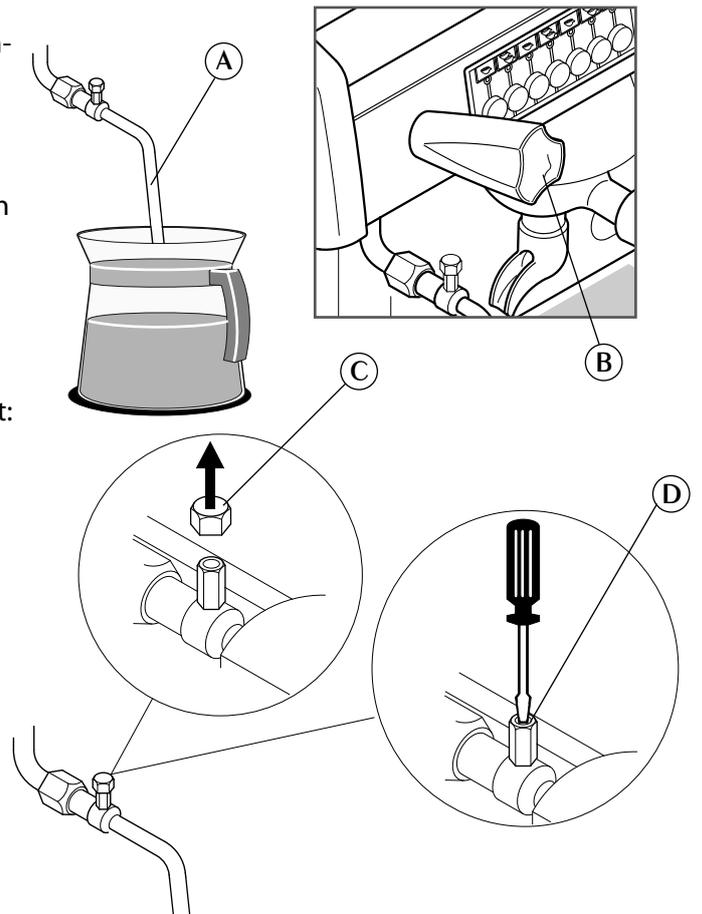

i

To keep the milk foaming device in perfect working order, it is advisable to carry out a delivery dry run after each use. Keep the ends of the of the nozzle clean at all times by means of a cloth dampened in luke-warm water. Use the utmost caution with the milk foaming nozzle, as high-temperature steam is present.

### 3-cup spout

To deliver 3 cups of coffee simultaneously, use the 3-cup spout (use about 21 gr. of ground coffee).



# SOFTENER

Mains water contains insoluble salts, which cause the build-up of lime scale deposits in the boiler and in other parts of the machine. The softener makes it possible to eliminate or substantially reduce the presence of these mineral salts.


The resin softener has the property of retaining the calcium contained in the water. For this reason after a certain period the resins are saturated and are to be regenerated with coarse kitchen salt (NaCl, sodium chloride) or special water softening salt. It is very important to regenerate the softener within the established times.

The regeneration is to be done regularly every 15 days. However, in locations with very hard water, it will be necessary to regenerate more frequently. The same is true of places in which there is a large consumption of hot water for tea or other uses.

## Softener regeneration

Proceed as follows:

- move levers (2) and (5) from left to right;
- Remove the lid by loosening the knob (1).
- Release enough water through the pipe (3) to make room for the amount of salt as required depending on the model (see table).
- Clean any salt or resin residue from the gasket located on the lid.
- Put the lid back in place by screwing the knob (1) down securely and move the lever (2) back from right to left.
- Let the salt water drain from the small tube (4) until the water is no longer salty (about 30-60 minutes). The salt allows the accumulated mineral salts to be released.
- Bring the lever (5) from right to left back to its initial position.

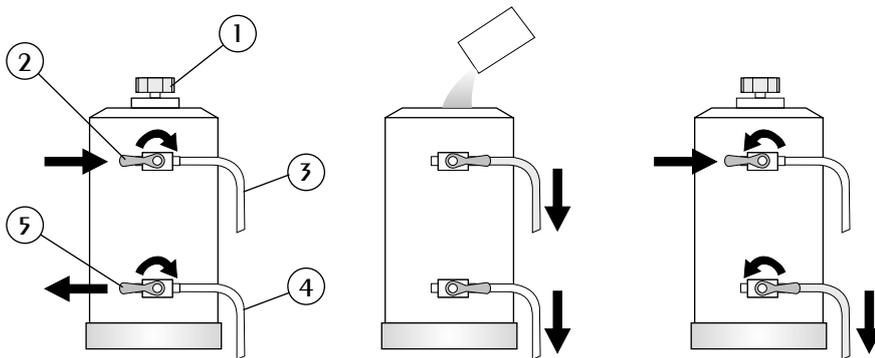

Model softener	Amount of salt
8 litres	1,0 kg
12 litres	1,5 kg
16 litres	2,0 kg



The build-up of lime scale in the hydraulic circuit and boiler inhibit thermal exchange, thus compromising proper operation of the machine. Heavy incrustation in the boiler may cause long machine shutdowns and in any case invalidate any guarantee, because this symptom indicates that regeneration has been neglected.

In order to keep the softener and hence the machine in perfect operating condition, it is necessary to perform regeneration periodically based on the use of the softener and the hardness of the water that is used.

The table alongside shows the values of the quantity of softened water based on the hardness of the water in the various units of measure:

- F°: French degree
- D°: German degree = 1.8 °F
- mg CaCO<sub>3</sub>

For further information on installation, start-up and regeneration of the softener, refer to the relative instruction manual.

Amount of softened water based on hardness					
F°	30°	40°	60°	80°	sal
D°	16,5°	22°	33°	44°	
mg CaCO <sub>3</sub>	30	40	60	80	
<b>8 litres</b>	1000 lt	900 lt	700 lt	500 lt	1,0 kg
<b>12 litres</b>	1500 lt	1350 lt	1050 lt	750 lt	1,5 kg
<b>16 litres</b>	2100 lt	1800 lt	1400 lt	1000 lt	2,0 kg

# CLEANING


For perfect cleaning and efficiency of the appliance, several simple cleaning operations are necessary on the functional parts and accessories as well as the body panels. The indications given here are applicable for normal use of the coffee machine. If the machine is heavily used then cleaning should be performed more frequently.

## Filter and filter-holder

The filters and the relative filter-holders must be cleaned daily in hot water. The best thing to do is to let them soak in hot water overnight so that the fatty coffee deposits can dissolve.

It is advisable to add an envelope or tablet of special detergent to the water, and then to rinse everything off with water.

Failure to clean the filters and filter holders daily will compromise the quality of the coffee and will also cause problems such as bad extraction and coffee grounds at the bottom of the cup.

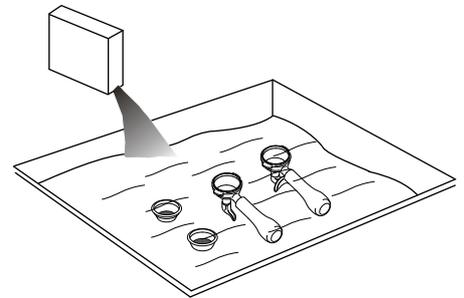

## Perforated disk and containment ring

Both the shower plate (4) and its containment ring (3) should be cleaned weekly in hot water. To do this loosen the screw (5) and remove the two elements from the dispensing unit.


## Steam nozzles

The steam pipes must be kept clean at all times. Check the ends of the steam nozzles and clean them monthly, clearing out the exit holes with a small needle.

## Delivery groups (except for SMMA version)

The cleaning of the internal parts of the delivery groups is to be performed weekly in the following manner:

- replace the normal filter of the filter-holder with a solid one;
- pour a teaspoon of a suitable detergent powder on the solid filter, and attach the filter-holder to the group;
- use the delivery switch to set the group in operation;
- repeat the above operations until the water comes out clean;
- turn off and remove the filter-holder from the group;
- rinse a final time, so as to remove any residual detergent.

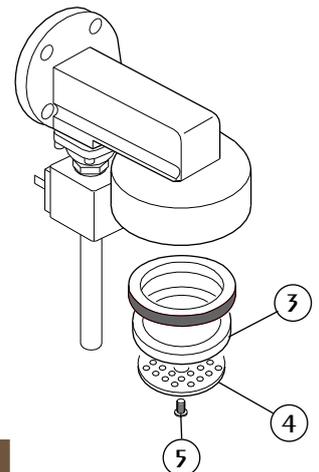

Do not use a solid filter to clean the machines with a lever group (AL).

## Body

The body panels should be cleaned with a cloth soaked in warm water. Do not use abrasive detergents since the panels could get scratched.


## Grinder-doser

Every week clean the bell jar and the dosing device with a cloth soaked in lukewarm water, both inside and out.

## Heated storage

Once the coffee in the heated storage container is finished, clean it as follows:

- remove the filter using a cloth and avoiding direct contact with the hot parts;
- empty the coffee grounds out of the filter and wash it with lukewarm water;
- remove the plastic funnel and wash it with lukewarm water;
- clean the container with a damp cloth and dry it;
- put the filter and funnel back in place.

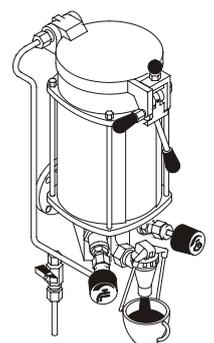


When cleaning, always use cloths that are completely clean and hygienic.

## Cappuccino maker

Use special care in cleaning the cappuccino maker, following the procedures indicated here:

- initially wash by placing the immersion tube in water and run a delivery for a few seconds;
- turn the rotating body (1) 90° to **pos.B** (closure of milk outlet duct);
- holding the aspiration tube in the air, dispense steam (cappuccino maker dry run);
- wait about 20 seconds to allow for internal cleaning and sterilisation of the cappuccino maker;
- close the steam and put the rotating body back in **pos.A**;
- if the air intake hole is blocked (2), clear it gently with a pin.

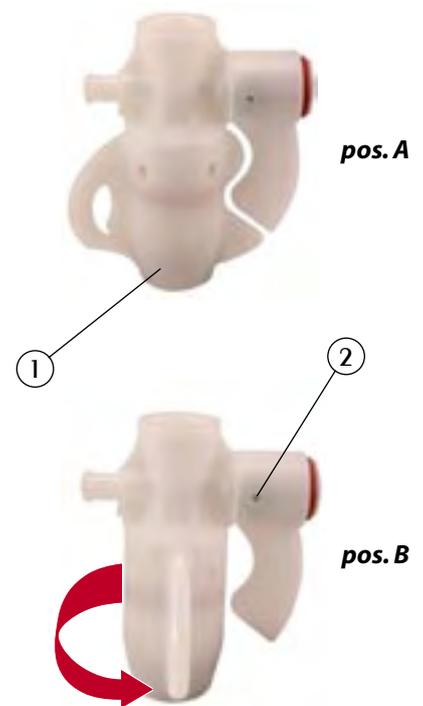

It is advisable to clean the cappuccino after each period of continued use so as to avoid malfunctions and to ensure the hygiene of the system

## CHECKS AND MAINTENANCE

To ensure perfect safety and efficiency of the machine over time, it is necessary to carry out maintenance. In particular, it is advisable to ask Technical Service to carry out an overall check of the machine at least once a year.

### Automatic

Check the following on a regular basis:

- check pump pressure with a pressure gauge which should indicate a pressure of around 8-9 bar. In case of anomalies contact technical service;
- also with a pressure gauge, check the boiler pressure, which should be about 0.8-1.2 bar. This may also require the assistance of technical service;
- check the wear of the filters, if there is damage to the edges and check if coffee grounds are getting into the cup. If necessary replace the filters.

### Grinder-doser

Check the following on a regular basis:

- check the dose, which should be about 6-7 gr. at a time and adjust the amount as necessary;
- always monitor the degree of grinding and modify as required;
- check the wear of the grinders. They will need to be replaced if there is too much powder in the ground coffee (the grinders usually last for about 600 kg of coffee).

### Softener

Do the following on a weekly basis:

- perform regeneration of the softener as described in chapter 9 (for the softener in the manual version);
- check that there is salt in the container (for the softener in the automatic version);

### Multihead anti-lime system

Check proper lighting of the green LED and check if any other LEDs are on:

- LED green      system OK
- LED red        system partially out of order (\*)
- LED off        system completely out of order (\*)

(\*) contact technical service

---

## SUGGESTIONS ON HOW TO OBTAIN A GOOD CUP OF COFFEE

To obtain a high-quality coffee, it is important that water hardness of the water used does not exceed 4-5 °F (French degrees). In the water hardness exceeds these values, it is advisable use a water softener.

Avoid using a water softener if water hardness is less than 4 °F. If the taste of chlorine in the water is especially strong, a special filter should be installed.

It is not advisable to keep large stores of coffee beans. Never grind large amounts of coffee. Use the amount the doser holds and if possible use it by the end of the day. Never purchase ground coffee as it expires quickly.

After the machine has not been used for a period of time (2-3 hours) make a few dry runs. Be sure to carry out regular cleaning and maintenance.

---

## LIST OF HAZARDS

This chapter describes possible hazards for the user if the specific safety standards described in this booklet are not adhered to.

### **The appliance must be connected to an efficient grounding system**

If this is not done, the appliance can be a source of dangerous electrical discharges in that it is no longer able to discharge electricity to earth.

### **Do not use running water to wash**

The use of pressurized water directly on the machine can seriously damage electrical appliances. Never use water jets to wash any part of the appliance.

### **Be careful with the steam nozzles and hot water**

During use, the steam nozzles and hot water may overheat, thus becoming a source of danger. Handle such parts carefully. Never direct steam or hot water jets directly on parts of the body.

### **Do not work on the machine when it is supplied with electrical power.**

Before carrying out any intervention on the machine you must turn it off by means of the main network switch or better yet, disconnecting the connection terminals in the network. Never remove any body panel when the machine is supplied with electrical power.

### **Never work on the hydraulic system before having emptied it.**

All work regarding the hydraulic system and the relative boiler are to be avoided when there is still water and pressure in the system. You must therefore empty it beforehand, closing the mains cock and dry-running the delivery group for a short time. Switch off the machine and open all the steam and water cocks and taps. With the pressure zero, completely empty the boiler, unscrewing the special pipe fitting situated on the lower part of it.

If the above procedure is not correctly carried out, opening any part of the hydraulic system can cause a sudden outlet of overheated water under pressure.

### **Lever machines**

Never lower the lever if there is no coffee in the filter, or if the filter holder is not installed on the group: the sudden upwards movement of the lever may damage the appliance and injure individuals.

### **Gas machines**

Periodically check for gas leaks in the system by applying a soapy solution to the ducts.

For safety reasons, close the gas heating system when the machine is not in use (at night or during hours of closure)

### **Use of the appliance**

This espresso coffee machine is an appliance exclusively for professional use. Any other type of use is considered wrong and therefore dangerous. Never allow children or incapable persons to use the machine.

Non-observance of the above-described standards can cause serious harm to people, property or animals.

Never work on the electronic apparatus when the machine is still supplied with electrical energy.

Shut down the machine completely by unplugging it from the mains before carrying out any operation.

---

# AL-AEP-SAE

1. General description .....	page 12
2. Push button panel.....	page 12
3. Preparation of the machine.....	page 13
4. Start-up .....	page 13
5. Grinding and dosing coffee.....	page 14
6. Making coffee .....	page 15
6.1 Version AL .....	page 15
6.2 Version AEP.....	page 15
6.2 Version SAE.....	page 16
7. Preparation of hot beverages .....	page 17
7.1 Hot water delivery (manual version) .....	page 17
7.2 Hot water delivery (automatic version).....	page 17
7.3 Steam delivery.....	page 17
8. Cup heater .....	page 18
9. Heated storage.....	page 19


---

# PERLA



INSTRUCTION MANUAL FOR USER / ENGLISH

# 1. MACHINE DESCRIPTION

1. Cup heater surface
2. Hot water nozzle
3. Push button panel
4. Steam knob
5. Steam nozzle
6. Filter holder
7. Programming key
8. Cup holding grille
9. Boiler / pump pressure gauge
10. Machine start-up
11. Cup heater switch
12. Machine on indication light
13. Cup heater on indication light

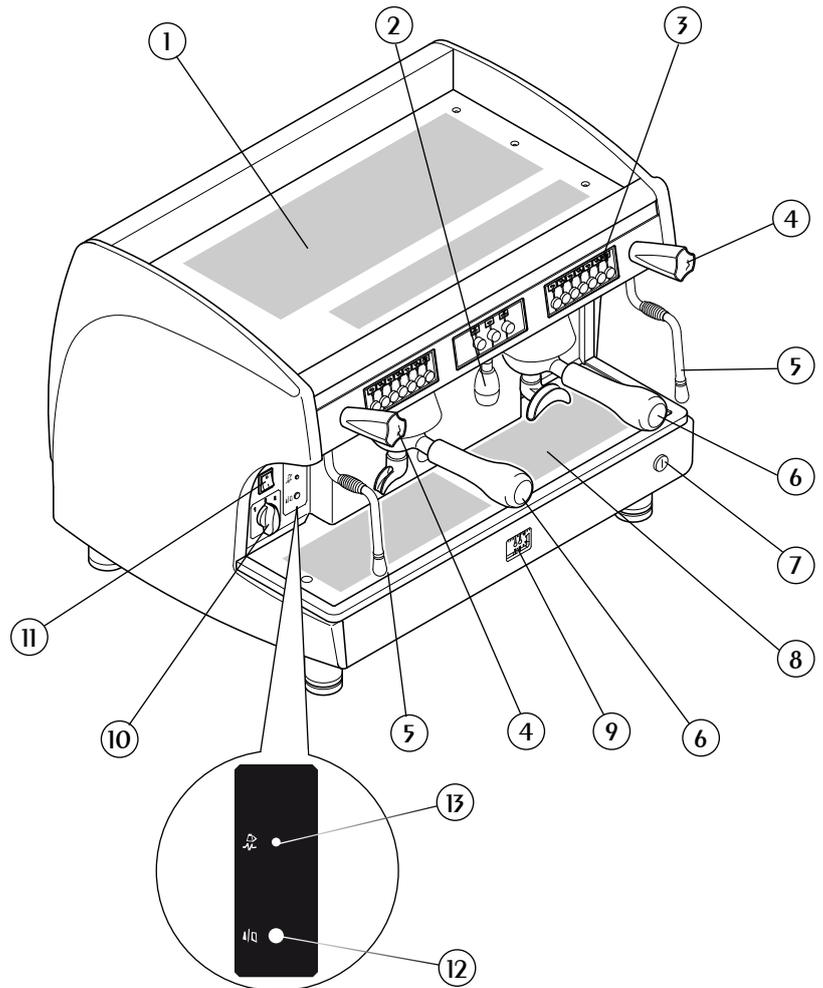

# 2. PUSH BUTTON PANEL

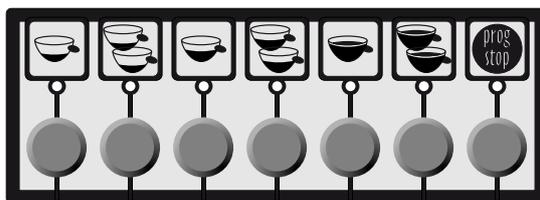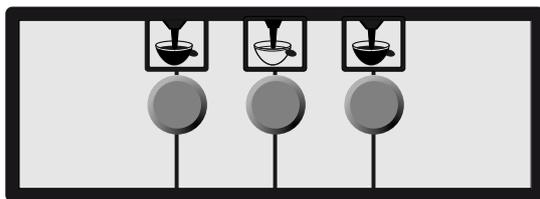

	1 Espresso coffee
	2 Espresso coffees
	1 Medium coffee
	2 Medium coffees
	1 Long coffee
	2 Long coffees
	Prog / Stop
	Hot water

## 3. PREPARATION OF THE MACHINE

The preparation of the machine and its installation must be carried out by qualified personnel.





Use of the machine without all the installation operations having been carried out by technical personnel could damage it seriously.

## 4. TURNING ON THE MACHINE

### 4.1 ELECTRIC HEATING

Before starting the machine, make sure that the level of water in the boiler is higher than the minimum level on the level-check window (14). If there is no water (first installation or after boiler maintenance), it is necessary to fill the boiler in advance, so as to prevent overheating of the heating element. Proceed as follows :


- Open the water tap of the water mains and of the softener.
- Turn the switch to position "1" (electrical power supplied to the pump for automatic boiler filling and machine services) and wait for the boiler to be automatically filled with water;
- Turn the switch to position "2" (full electrical power supplied, including the heating element in the boiler) and wait for the machine to warm up completely.

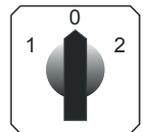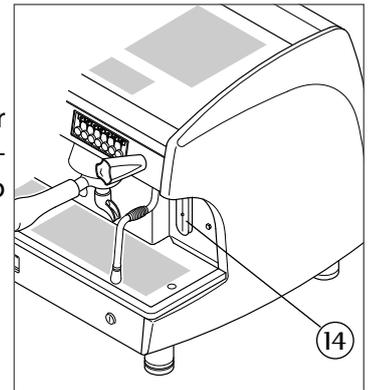

- during the machine's warm-up phase (roughly 20 minutes), the negative pressure valve will release steam for a few seconds until the valve itself closes
- before using the machine, run deliveries dry with the filter holder attached for a few seconds to release any air which may be in the circuit, so that the delivery groups are completely heated
- before using the machine, dispense a few servings of coffee to test the grinding and to check the operating pressure of the machine


### 4.2 GAS HEATING (if THERE IS A GAS SYSTEM)

- Turn the main switch (A) to position 1;
- open the gas valve (B) on the mains;
- hold down the push button (C) and, at the same time, press the on button (D). Once the flame ignites, hold down knob (C) for a few seconds, to allow proper activation of the thermocouple;
- then check through the window (E) that the flame has ignited;
- wait for the operating pressure indicated on the pressure gauge to reach the working value of 1-1.2 bar;

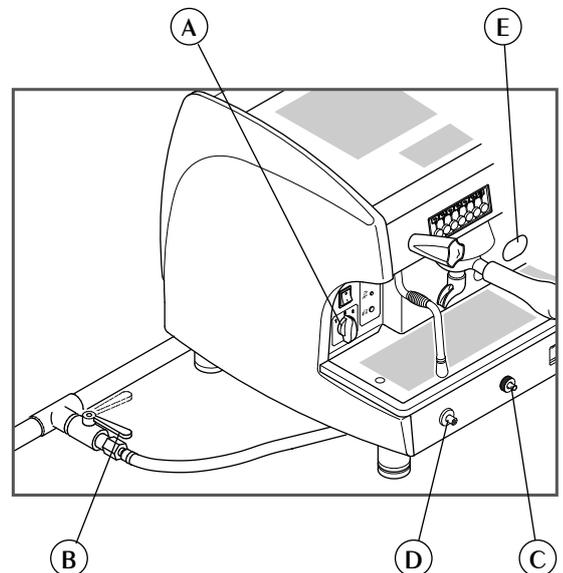

### 4.3 ELECTRIC + GAS HEATING (if GAS SYSTEM IS PRESENT)

- Proceed as indicated in paragraph 4.2 "Gas heating";
- after checking that the flame has ignited, turn the main switch (A) to position 2. In this way the boiler heating element is powered and operating pressure will be reached more quickly;
- wait for the operating pressure indicated on the pressure gauge to reach the working value of 1-1.2 bar;

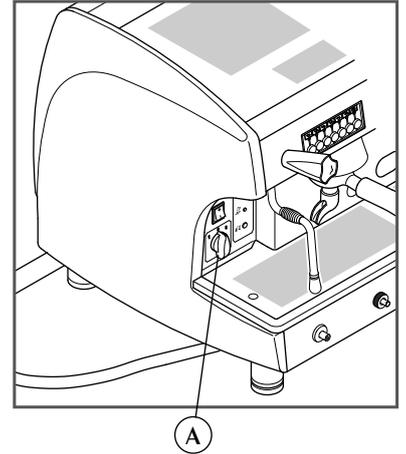

i


For reasons of safety, gas heating must be shut down during long periods of disuse of the machine (during the night or when the establishment is closed). It is not advisable to put cloths or other objects on the cup heater, as this obstructs normal air flow.

## 5. GRINDING AND DOSING COFFEE

Place the grinder-doser in a convenient place near the machine. Grinding and dosing of coffee must take place in accordance with the instructions of the manufacturer of the grinder-doser. To achieve good quality espresso coffee we suggest the following:

- do not keep large amounts of coffee in whole beans. Observe the expiry date indicated by the producer;
- grind the volume of coffee based on use, place the amount the doser contains and if possible use it before the end of the day;
- if possible, never buy coffee that is already ground as it expires quickly. If necessary, buy it in small vacuum-sealed packages.

Fill the filter with a dose of ground coffee (circa 6-7 go.) and press it with the press. Attach the filter holder to the dispensing group.

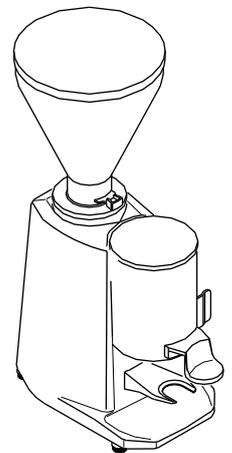

i




To prevent the seal wearing too soon clean the edge of the filter before engaging the filter holder on the dispensing unit. Do not excessively tighten the filter holder to the dispensing group.



## 6. Making coffee

### 6.1 VERSION AL

- put the coffee cup under the dispensing spout.
- pull the lever all the way down;
- wait for a few seconds (3÷5 seconds);
- raise the lever until you meet some resistance, then release it;
- wait until coffee delivery is complete.

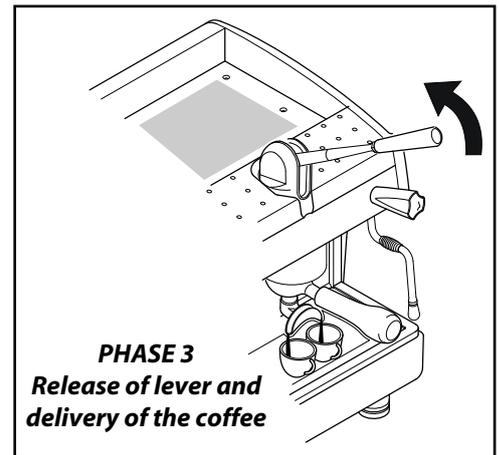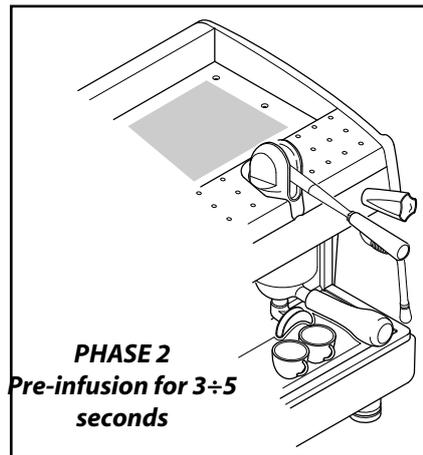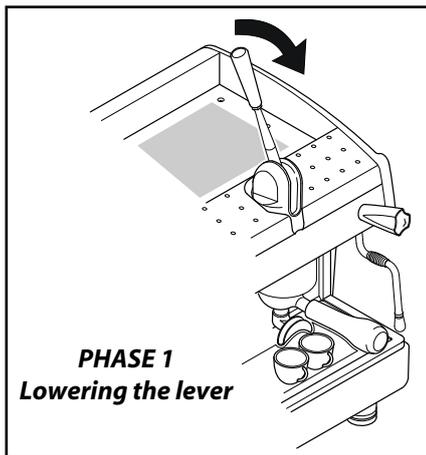


Never perform the above actions without coffee in the filter or without the filter holder attached to the delivery group. The rapid upward movement of the lever may cause damage to the appliance, individuals or property.

Delivery time deepens on grinding and the amount of coffee in the filter holder.

### 6.2 AEP VERSION

- put the coffee cup under the dispensing spout.
- Press the desired delivery switch. You will have the delivery which can be stopped by means of the same switch once the desired amount of coffee in the cup is obtained.

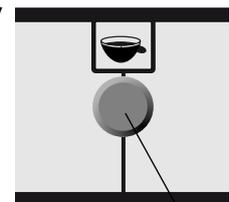


*Dispensing coffee*

## 6.3 SAE VERSION


### COFFEE DELIVERY

- put the coffee cup under the dispensing spout;
- press the desired dose key and wait for coffee to be delivered (LED comes on);
- to stop delivery of coffee in advance, press the delivery key again or press the key STOP;
- in the event of anomalies or if the push button panel is locked, use the manual delivery switch.

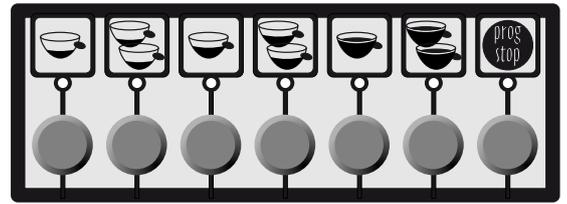

### COFFEE DOSE PROGRAMMING

- Turn the programming key (A) to the **ON** position;
- Hold the PROG/STOP  key down for 5 seconds: all LED on the push button panel come on;
- Press the dose key to be programmed (e.g. 1 espresso coffee );
- Wait for dispensing. To confirm the dose press the dose key  or the PROG/STOP  key again.
- Repeat this operation for the other dose keys.
- Upon conclusion of the programme, press the key PROG/STOP  until all LEDs go off on the push button panel, and turn the programming key to **OFF**.

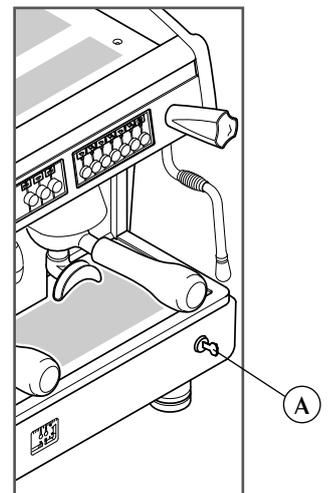


For models with 2-3-4 groups it is possible to program simultaneously all machine push button panels using only the right push button panel. It is however advisable to check the programming of the other push button panels.

## 7. PREPARATION OF HOT DRINKS

### 7.1 HOT WATER DELIVERY (MANUAL VERSION)

To dispense hot water, turn the tap knob counter-clockwise(1): the hot water coming out of the nozzle (2) will be proportional to the opening of the tap.

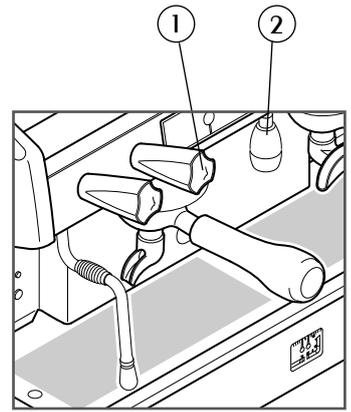


### 7.2 HOT WATER DELIVERY (AUTOMATIC VERSION)

#### DISPENSING HOT WATER

- Put the cup under the hot water spout (2);
- press the hot water key (4)  : wait for the delivery of water;
- to stop delivery in advance, press the hot water delivery key (4)  again or press the key PROG/STOP .

#### PROGRAMMING DOSE OF HOT WATER

- Turn the programming key (3) to **ON**;
- Put the cup under the hot water spout (2);
- press the Key PROG/STOP  on the right push button panel until all dose key LEDs come on;
- press the hot water delivery key (4)  ;
- upon reaching the desired dose confirm by again pressing the key for hot water delivery (4)  ;
- upon completion of programming, turn the programming key (3) back to the **OFF** position.

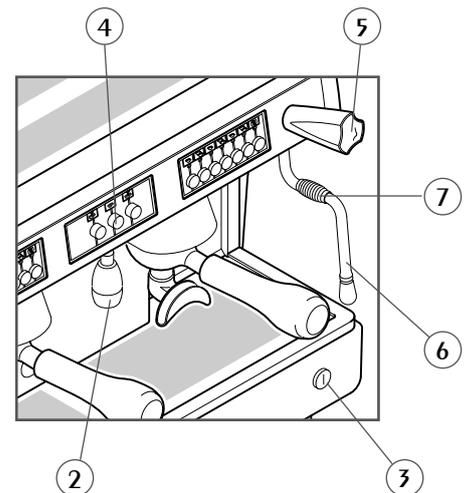

### 7.3 STEAM DELIVERY

To dispense steam, turn the tap knob counter-clockwise (5): the steam coming out of the nozzle (6) will be proportional to the opening of the tap.



Carefully move the steam nozzle with the anti-burn nozzle (7) and do not touch the hot water nozzle: contact with the hot water and steam may be harmful to individuals, animals or property.


## 8. Cup HEATER

### 8.2 AL - AEP VERSION

To activate, deactivate or adjust the cup heater proceed as follows:

- remove the cup support grille;
- remove the drip tray;
- turn the thermostat; the temperature will be in proportion to the value indicated on the thermostat.


0 = cup warmer off
30 = minimum temperature
60 = medium temperature
90 = maximum temperature

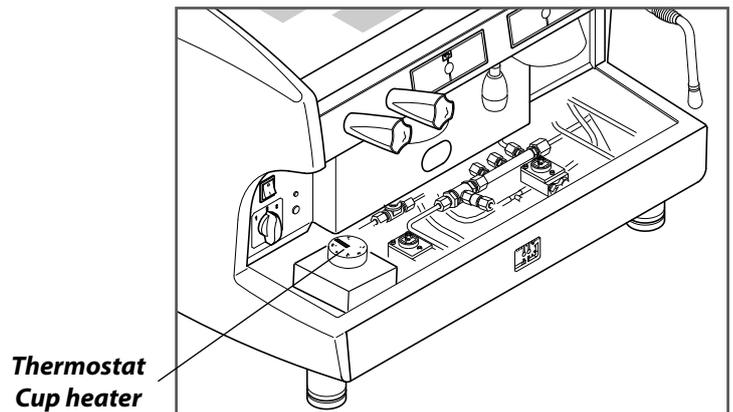

### 8.2 SME VERSION

To activate, de-activate or adjust the cup heater, proceed as follows:

- Turn the programming key to **OFF** and the cup-heater switch  to **ON**;
- Upon start-up of the machine, hold down the key PROG/STOP : on the push button panel, the flashing LED will indicate the current configuration of the cup heater as shown in the drawing below;
- To modify configuration of the cup heater, at machine start-up hold down the key PROG/STOP  until the flashing LED on the push button panel comes on steady;
- Press the key that corresponds to the desired configuration;
- Press PROG/STOP  to confirm the operation.

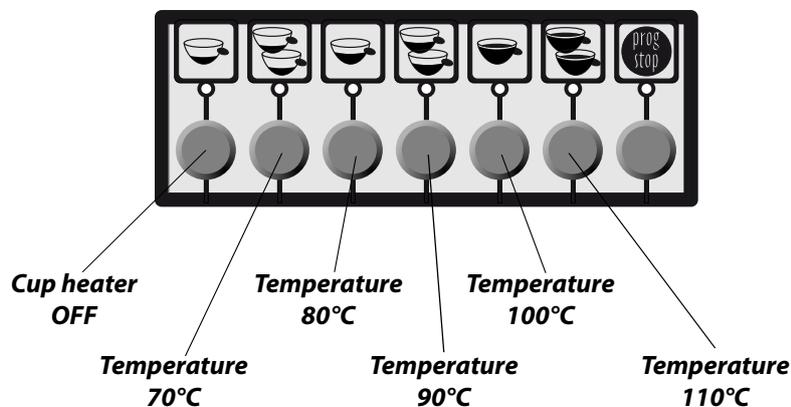

It is possible to turn off the cup heater by simply placing in the **OFF** position the switch located above the main switch of the machine.

## 9. HEATED STORAGE

This is composed of a recipient where a substantial amount of coffee is produced (2.5 litres) which is stored in reserve when there is high demand for this beverage (breakfasts, conferences, etc.).

### PREPARATION


- raise the lid (1) pulling the knob (2) to the left and raising the lever;
- place the ground coffee (approx. 130 gr.) in the filter (3) and close, clicking the knob into the safety position;
- open the water tap (4) by turning it counter-clockwise. Upon reaching the desired amount (maximum capacity 2.5 litres) close the tap;
- when the operation is complete, residual pressure must be discharged with the discharge valve (5) located under the heat storage group.

### DELIVERY

Coffee is drawn from the container by using the lever of the dispenser (5) located in the middle of the lower part. The remaining coffee can be heated by means of a steam tap (6) located on the right hand side.



Always open the bleed valve (7) before opening the lid. Failure to do so may cause serious harm to property, individuals or animals.

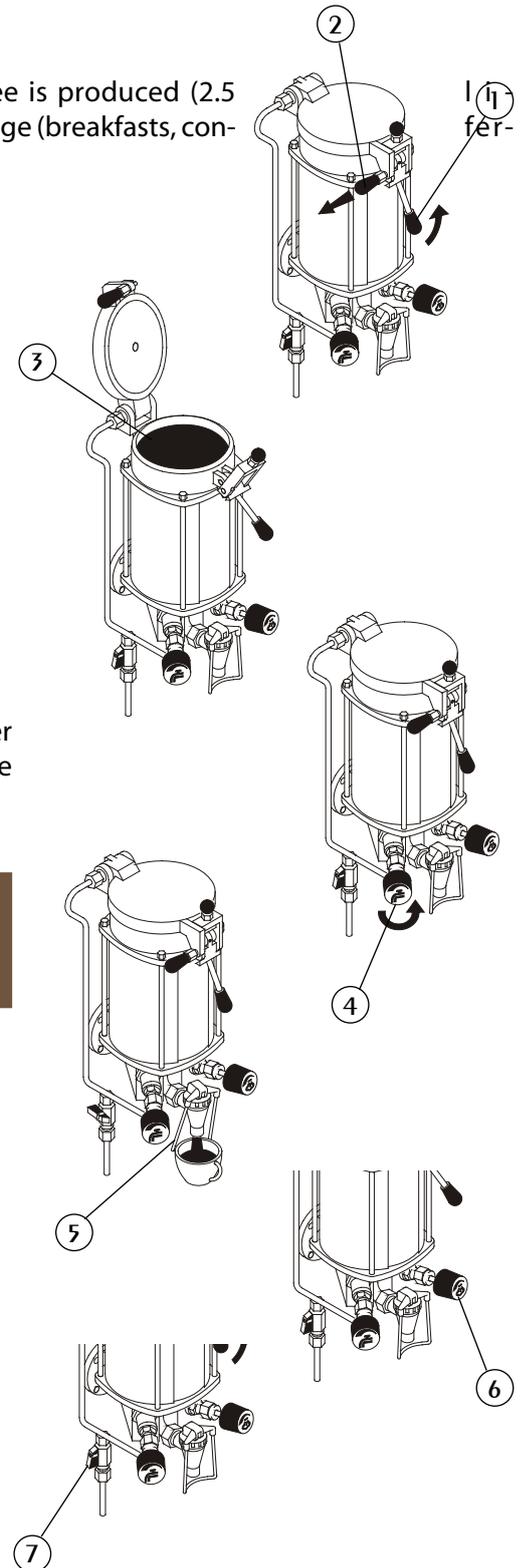



---

# SAE DISPLAY

1.	General description.....	page 22
2.	Push button panel.....	page 22
3.	Preparation of the machine .....	page 23
4.	Start-up.....	page 23
5.	Grinding and dosing coffee .....	page 24
6.	Making coffee .....	page 24
7.	Dispensing hot water .....	page 25
8.	Counts.....	page 25
9.	Cup heater.....	page 26
10.	Programming of machine parameters .....	page 26
11.	Resetting data .....	page 28
12.	Signals.....	page 29


---

# PERLA



INSTRUCTION MANUAL FOR USER - ENGLISH

# 1. MACHINE DESCRIPTION

1. Display
2. Manual coffee dispensing buttons and hot water dispensing
3. Push button for coffee selections and programming
4. Steam knob
5. Steam nozzle
6. Filter holder
7. Programming key
8. Cup holding grille
9. Boiler / pump pressure gauge
10. Hot water nozzle
11. ON switch
12. Cup heater switch
13. Machine on indication light
14. Cup heater on indication light

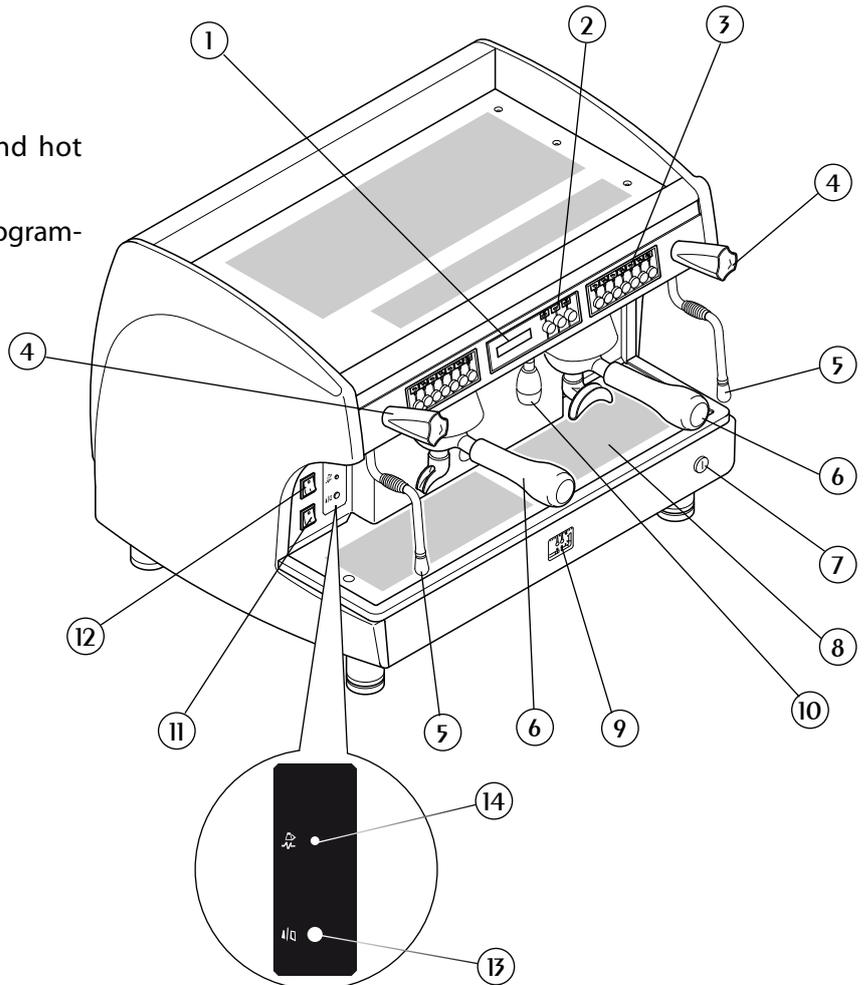

# 2. PUSH BUTTON PANEL

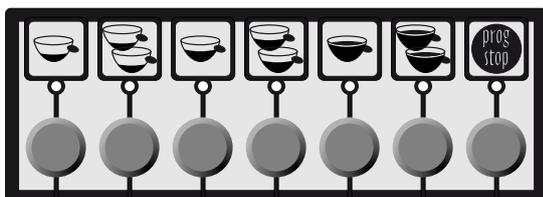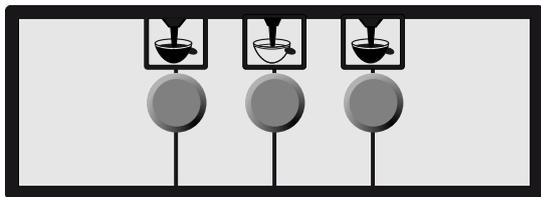

	Key Use	Key Programming
	1 Espresso coffee	MODE
	2 Espresso coffees	ENTER
	1 Medium coffee	INCREASE
	2 Medium coffees	DECREASE
	1 Long coffee	-
	2 Long coffees	-
	Prog / Stop	PROGRAMMING
	Hot water	-

### 3. PREPARATION OF THE MACHINE


The preparation of the machine and its installation must be carried out by qualified personnel.



Use of the machine without all the installation operations having been carried out by technical personnel could damage it seriously.

### 4. TURNING ON THE MACHINE


- Pres the main switch(11) of the machine;
- Wait for possible automatic re-filling of water in the boiler;
- Wait a few seconds longer for the auto-test to be carried out;

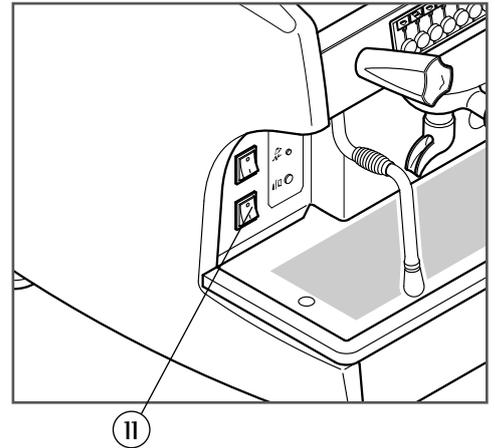

PLEASE WAIT FOR  
FUNCTIONAL TEST

TEST RESULT  
- OK -

- The machine is ready for use when the following message is displayed:

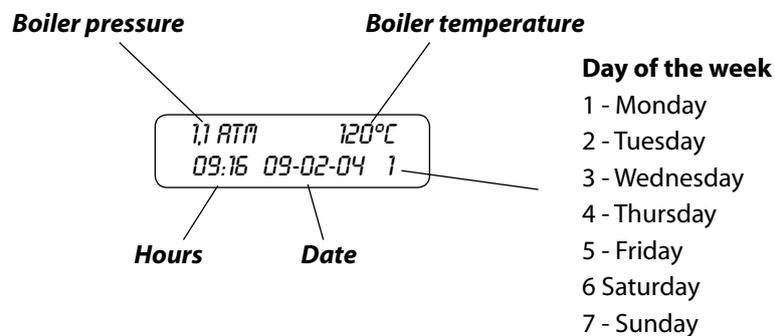

If the temperature is lower than 90° C (machine warm-up phase), the message *LOW* appears on the display.

With the programming key in the **ON** position, the machine can be partially switched off (heating element and selections disabled) also by simultaneously pressing the keys and for 3 seconds. To put the machine back in service press again the keys simultaneously for 3 seconds.




- during the machine's warm-up phase (roughly 20 minutes), the negative pressure valve will release steam for a few seconds until the valve itself closes
- before using the machine, run deliveries dry with the filter holder attached for a few seconds to release any air which may be in the circuit, so that the delivery groups are completely heated
- before using the machine, dispense a few servings of coffee to test the grinding and to check the operating pressure of the machine

## 5. GRINDING AND DOSING COFFEE

Place the grinder-doser in a convenient place near the machine. Grinding and dosing of coffee must take place in accordance with the instructions of the manufacturer of the grinder-doser. To achieve good quality espresso coffee we suggest the following:

- do not keep large amounts of coffee in whole beans. Observe the expiry date indicated by the producer;
- grind the volume of coffee based on use, place the amount the doser contains and if possible use it before the end of the day;
- if possible, never buy coffee that is already ground as it expires quickly. If necessary, buy it in small vacuum-sealed packages.

Fill the filter with a dose of ground coffee (circa 6-7 gr.) and press it with the press. Attach the filter holder to the dispensing group.

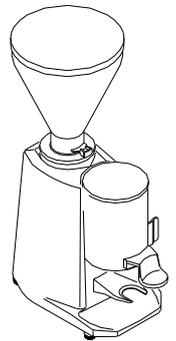

**i**



To prevent the seal wearing too soon clean the edge of the filter before attaching the filter holder to the dispensing unit. Do not excessively tighten the filter holder to the dispensing group.



## 6. MAKING COFFEE

### 6.1 DELIVERY OF COFFEE DOSES

- put the coffee cup under the dispensing spout.
- press the desired dose key: wait for coffee to be delivered (LED comes on);
- to stop delivery of coffee in advance, press the delivery key again or press the key PROG/STOP ;
- in the event of anomalies or if the push button panel is locked, use the manual switch.

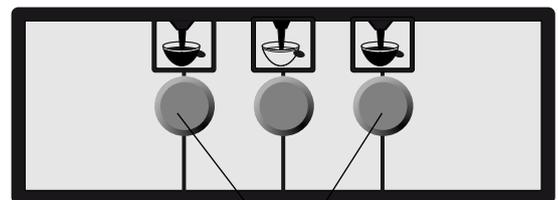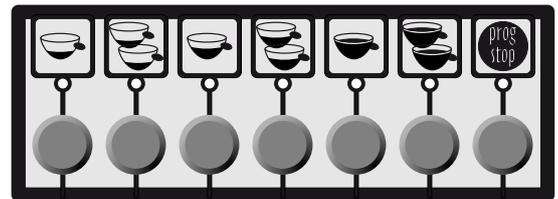


*Dispensing manual coffee*

### 6.2 PROGRAMMING COFFEE DOSES

For models with 2-3-4 groups it is possible to program simultaneously all machine push button panels using only the right push button panel. It is however advisable to check the programming of the other push button panels:


- Turn the programming key (A) to **ON** (P flashes on the display);
- Hold the PROG/STOP ; key down for 5 seconds: all LED on the push button panel come on;
- Press the dose key to be programmed (e.g. 1 espresso coffee );
- Wait for dispensing. To confirm the dose press the dose key  or the PROG/STOP  key again.
- Repeat this operation for the other dose keys.
- Upon conclusion of the programme, press the key PROG/STOP  until all LEDs go off on the push button panel, and turn the programming key to **OFF**.

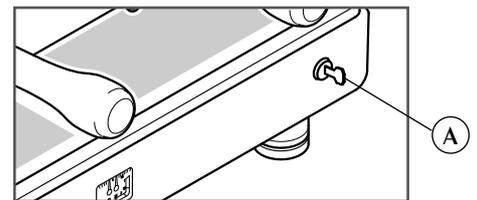

## 7. DISPENSING HOT WATER

### 7.1 HOT WATER PROGRAMMING

- Turn the programming key (3) to **ON** (P flashes on the display);
- Put the cup under the hot water spout (2);
- press the key PROG/STOP  of the right push button panel, lighting all dose key LEDs;
- press the hot water delivery key (4) ;
- when the desired dose has been attained, confirm by pressing the PROG/STOP  key;
- upon completion of programming, turn the programming key (3) back to **OFF**.

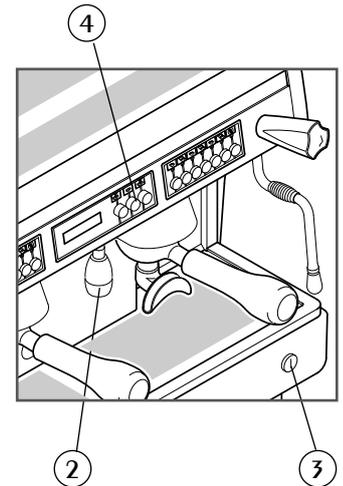

### 7.2 HOT WATER DELIVERY

- Put the cup under the hot water spout (2);
- press the hot water key (4) : wait for the delivery of water;
- to stop delivery in advance, press the hot water delivery key (4)  again or press the key PROG/STOP .



Do not touch the hot water nozzle: contact with the hot water and steam may be harmful to individuals, animals or property.

## 8. COUNTS

Allows the visualisation of the count of the work carried out by the machine (with the programming key set to **OFF**):

- 1) Keep the PROG/STOP  key on the right push button panel pressed for 5 seconds; the display shows the total number of selections carried out;
- 2) by pressing the selection keys (tea or coffee) the display shows the number of selections of the corresponding key;
- 3) press twice the PROG/STOP  key to exit counts.

TOTAL COFFEES  
000000

COUNTERS  
000000



To reset dose counts see chapter 13 "Data reset"

## 9. Cup HEATER

To activate, deactivate or adjust the cup heater, turn the cup heater switch  placed above the turn on machine switch to **ON** (with the programming key on **OFF**) and proceed as follows:


- Hold down the key PROG/STOP  of the right hand push button panel for 5 seconds;
- Press again the PROG/STOP  key displaying the message
- Use the increase (+)  and decrease (-)  keys of the right push button panel to modify the temperature of the cup heater shown on the display;
- keep the PROG/STOP  key pressed to confirm the operation..

SCALDATAZZE  
80°C

**i**

To deactivate the cup heater set a temperature lower than 70°C (the display shows ---- ) or turn the heater switch on **OFF** (placed above the machine start switch).

## 10. PROGRAMMING OF MACHINE PARAMETERS

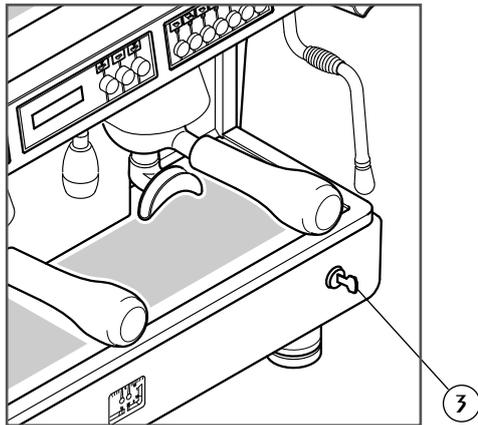

Turn the programming key (3) to **ON** (P flashes on the display).

Keep the MODE  key of the right push button panel pressed for at least 3 seconds to have access to programming.


Use the MODE  key of the right hand push button panel to scroll the various areas of the programming menu.

Use the ENTER  key of the right hand push button panel to move from a parameter to the next one within the same area.

To modify the value of each parameter, use the increase  and decrease  keys of the right hand push button panel.

**i**

The system automatically exits the programming phase a few seconds after the last operation carried out. When programming is finished, turn the programming key back on **OFF**. The programming of the electronic push button panel can be carried out only when the programming switch is on **ON**.

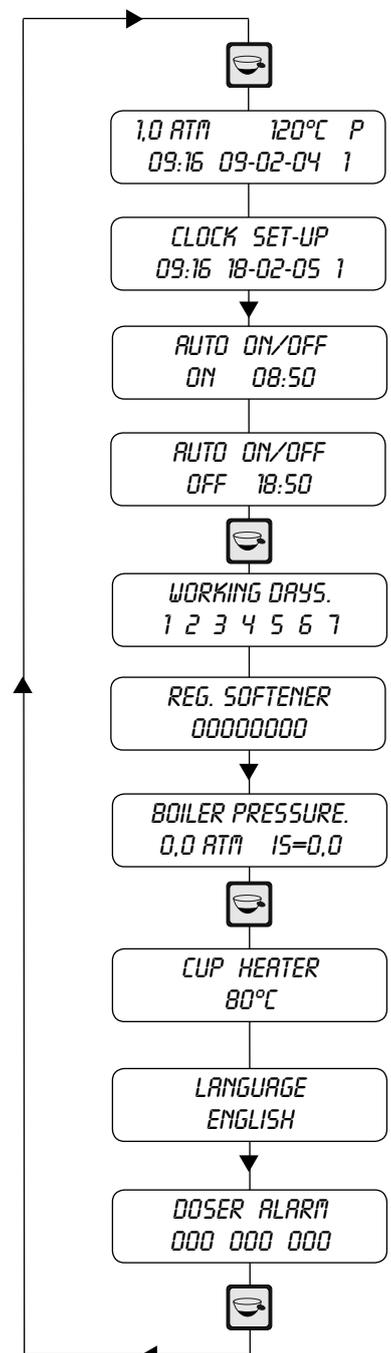

## 10.1 PROGRAMMING of CLOCK and DATE

Change of hour, date and day of :

- 1) Hold down the key MODE  of the right hand push button panel for 3 seconds;
- 2) use the keys  and  to change the parameter during the flashing phase;
- 3) press the ENTER  key to move on to the next parameter;
- 4) press the MODE  key to move on to the next programming.



## 10.2 START-UP PROGRAMMING

Programming of the automatic switching on of the machine:

- 1) set the machine switching on time with the keys  and ;
- 2) press the ENTER  key to pass from hours to minutes and vice versa;
- 3) press the MODE  key to pass on to the next programming.



## 10.3 SHUT DOWN PROGRAMMING

Programming of the automatic switching off of the machine:

- 1) set the machine shut down time with the keys  and ;
- 2) press the ENTER  key to move from hours to minutes and vice versa
- 3) press the MODE  key to move on to the next programming.



## 10.4 REST DAY PROGRAMMING

To program machine shutdown for rest day(s), follow the instructions below:

Days of the week						
1	2	3	4	5	6	7
Monday	Tuesday	Wednes-	Thursday	Friday	Saturday	Sunday

### Shutdown

- 1) Choose the day(s) for shutdown by scrolling with the keys  and .
- 2) Use the key ENTER  to set the dash " - " at the day(s) of desired shutdown.

Example of machine shutdown on Tuesday and Thursday:

WORKING DAYS  
1 - 3 - 5 6 7

### Switching ON

To eliminate machine shutdown, use the ENTER  key to reset the numerical value of the day.

Example of machine with no days set for shutdown:

WORKING DAYS  
1 2 3 4 5 6 7



Also activate the ON and OFF times, see paragraphs **10.2** and **10.3**

## 10.5 WATER SOFTENER REGENERATION PROGRAMMING

Programming of the automatic warning of water softener regeneration:

- 1) with the keys  and  set the water quantity (increments of 50 l.);
- 2) press the MODE  key to move on to the next programming.



## 10.6 CUP HEATER PROGRAMMING

Temperature programming and activation of cup heater:

- 1) enter programming;
- 2) set the temperature with the keys  and ;
- 3) press the MODE  key to move on to the next programming.



The cup heater is deactivated if the set temperature is lower than 70°C.

## 10.7 LANGUAGE PROGRAMMING


Programming of the language displayed:

- 1) enter programming;
- 2) set the language with the keys  and ;
- 3) press the MODE  key to move on to the next programming.



## 10.8 DOSERS ALARM




Control of the dosers alarm. The 4 data displayed are relevant to the brewing groups. The first datum on the right is relevant to the first group on the right and so on for the others.

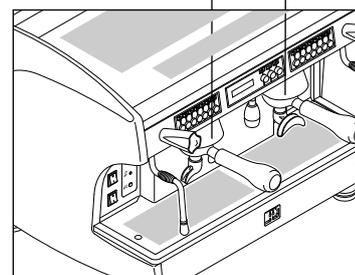

## 11. RESETTNG DATA TO ZERO


### 11.1 RESETTNG of DOSERS ALARM

   - 1) Turn the programming switch to **ON**;
- 2) Use the MODE  key to scroll the menu until dosers alarm
- 3) Press the key  to start the resetting;
- 4) Press the UP ARROW key  for at least 3 seconds to confirm the zero setting.

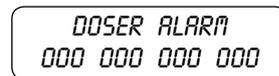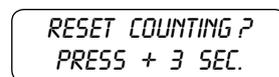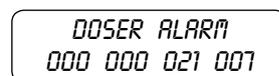


## 11.2 RESET of WATER LITRES COUNT for SOFTENER REGENERATION

- 1) Turn the programming switch to **ON**;
- 2) Simultaneously press the 4 keys PROG     of the left push button panel until the display shows the signal.
- 3) to bypass regeneration control, set a value of **00** litres.

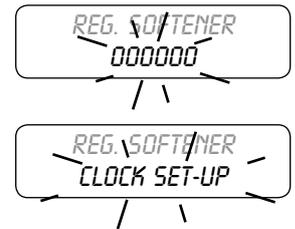

## 11.3 RESETTING SELECTION COUNT TO ZERO

- 1) Turn the programming switch on **OFF**;
- 2) Keep the PROG/STOP  key pressed for 5 seconds;
- 3) Turn the programming switch on **ON**;
- 4) Press the key  to start the zero setting;
- 5) Press the UP ARROW key  for at least 3 seconds to confirm the zero setting.

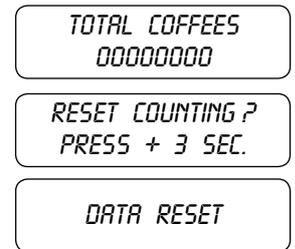

The above procedure allows resetting to zero of the counts of each push button panel while leaving the total counts of the machine unchanged (life cycle of the machine).

## 12. SIGNALS

	cause	solution
	Boiler filled with water when using the machine for the first time or when refilling to reach the water level.	Wait for the boiler to be completely filled.
	Time for filling the boiler with water longer than expected.	Make sure the water mains cock is opened. Switch the machine off and back on again. If the warning is still on after a few attempts, call Technical Assistance.
	Fault of the volumetric electronic control	Stop delivery by pressing the dose key. Call the Technical Assistance.
	Water softener regeneration request	Carry out the water softener regeneration. To put off the warning turn the programming switch on ON and press simultaneously the 4 display keys     for 5 seconds.



If the machine will not work call technical assistance.



---

# SAE DISPLAY

**ASD** - AUTOMATIC STEAMER DEVICE

**DS** - DRINK SELECTION

1.	General description.....	page 32
2.	Push button panel.....	page 33
3.	Preparation of the machine .....	page 34
4.	Start-up.....	page 34
5.	Grinding and dosing coffee .....	page 34
6.	Coffee selections.....	page 35
7.	Dispensing hot water .....	page 36
8.	Selection counts.....	page 36
9.	Cup heater.....	page 37
10.	DS - drink selection .....	page 38
11.	ASD - Automatic Steamer Device .....	page 40
12.	Boiler pressure .....	page 41
13.	Washing .....	page 41
14.	Programming of machine parameters .....	page 42
15.	Resetting data.....	page 46
16.	Signals.....	page 47


---

# PERLA

INSTRUCTION MANUAL FOR USER - ENGLISH


# 1. MACHINE DESCRIPTION

1. Display
2. Manual coffee dispensing buttons and hot water dispensing
3. Push button for coffee selections and programming
4. Hot water nozzle
5. Hot water knob
6. Steam nozzle
7. Filter holder
8. Programming key
9. Cup holding grille
10. Boiler / pump pressure gauge
11. DS - Drink Selection / LCL - Milk Coffee Milk
12. ASD - Automatic Steamer Device
13. Machine ignition switch
14. Cup heater switch
15. Cappuccino maker
16. Steam knob
17. Cup heater surface
18. ASD steam nozzle
19. ASD temperature probe
20. Cup heater on light

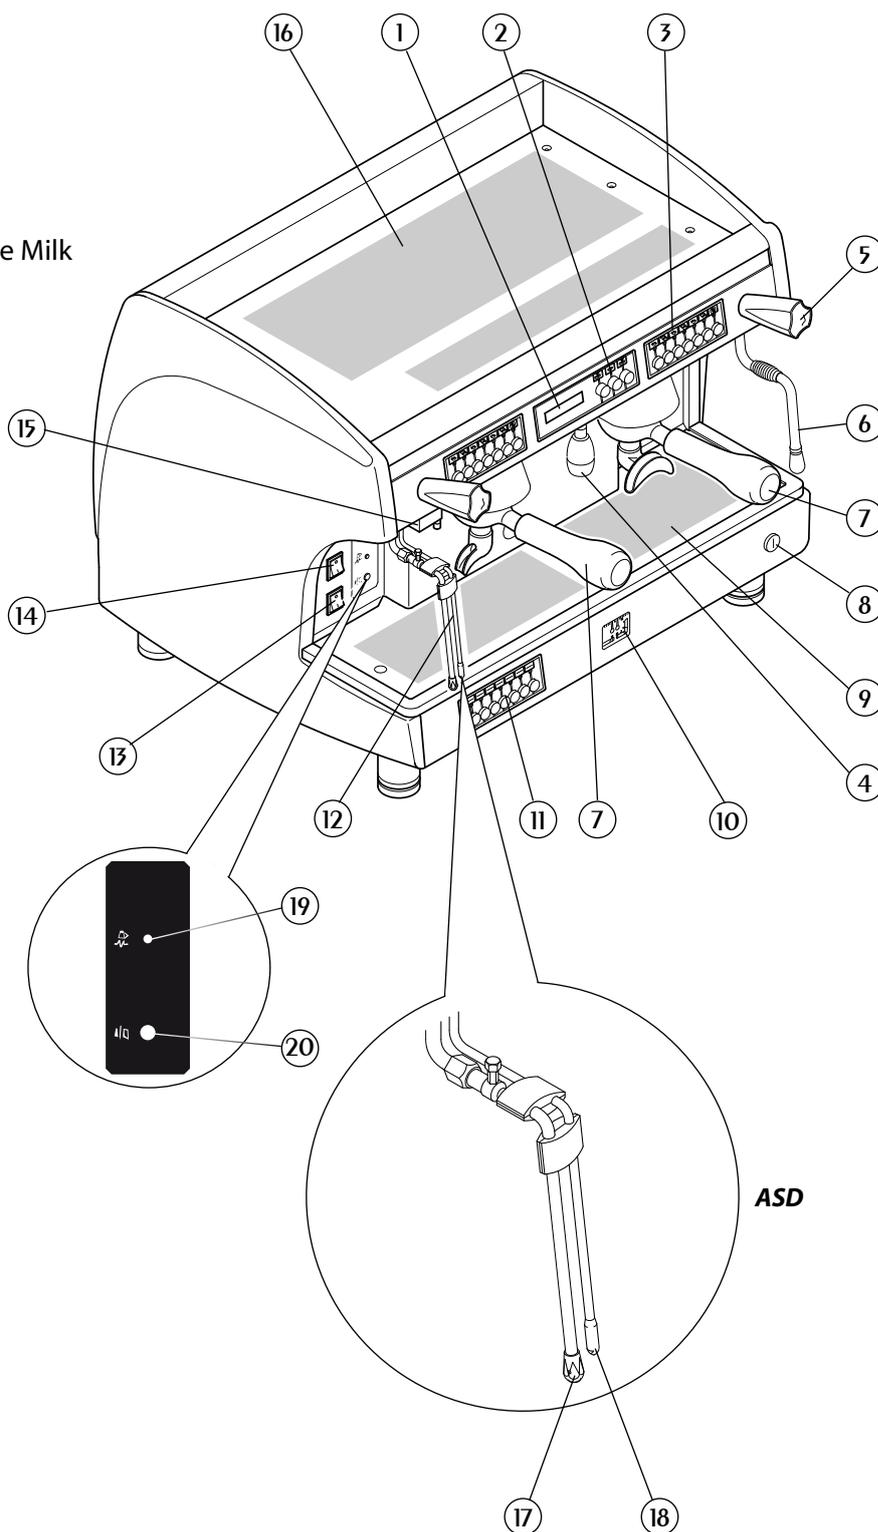


## 2. Push button panel

### 2.1 MANUAL coffee dispensing buttons HOT WATER dispensing buttons

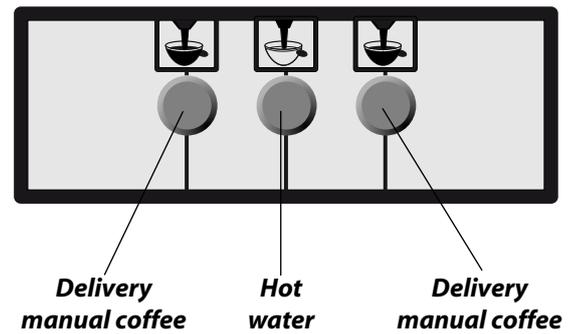


### 2.2 Push button panel for coffee selections SELECTION PROGRAMMING push button panel

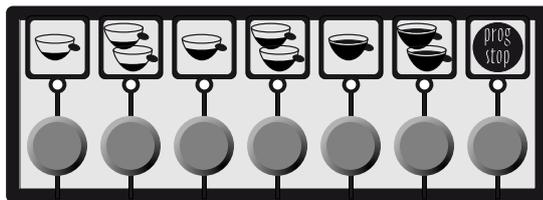

	Key Use	Key Programming
	1 Espresso coffee	MODE
	2 Espresso coffees	ENTER
	1 Medium coffee	INCREASE
	2 Medium coffees	DECREASE
	1 Long coffee	-
	2 Long coffees	-
	Prog / Stop	PROGRAMMING
	Hot water	-

### 2.3 DS push button panel - DRINK SELECTION

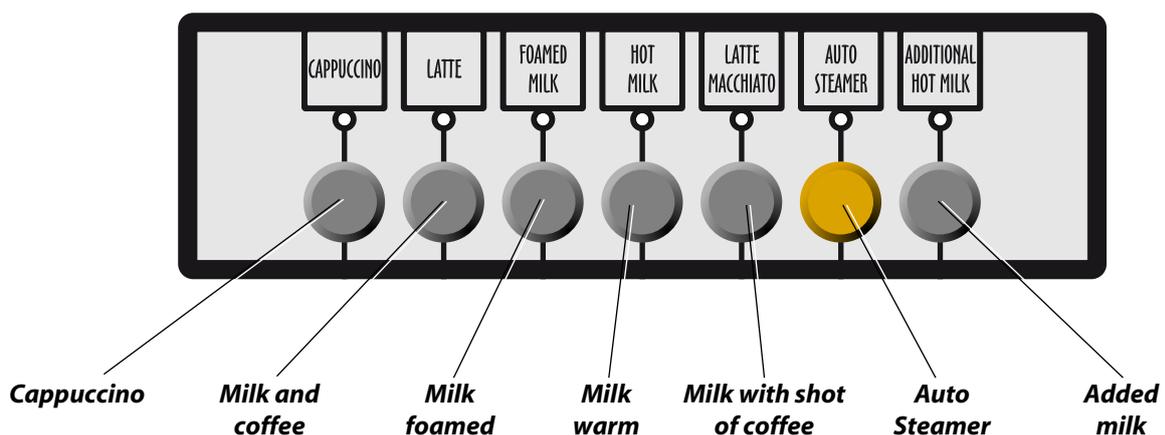

### 3. PREPARATION OF THE MACHINE



The preparation of the machine and its installation must be carried out by qualified personnel.



Use of the machine without all the installation operations having been carried out by technical personnel could damage it seriously.

### 4. TURNING ON THE MACHINE

- Pres the main switch(13) of the machine;
- Wait for possible automatic re-filling of water in the boiler;
- Wait a few seconds longer for the auto-test to be carried out;
- The machine is ready for use when the following message is displayed:

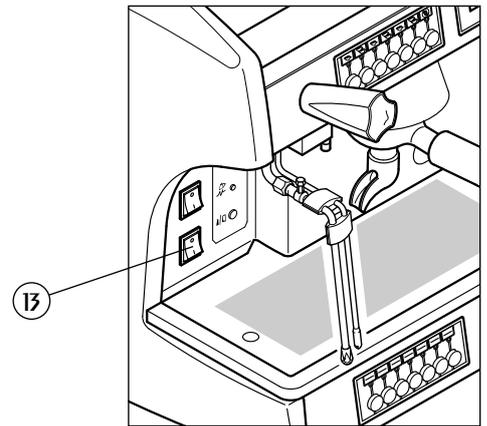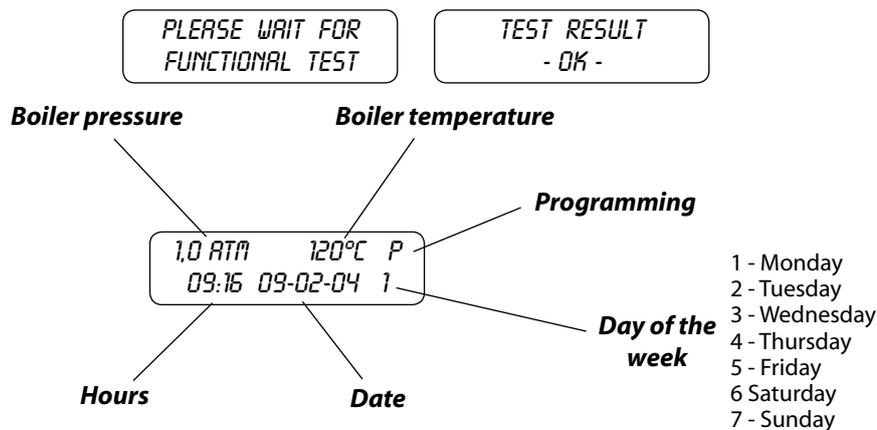

If the temperature is lower than 90° C (machine warm-up phase), the message *LOW* appears on the display.


With the programming key in the **ON** position, the machine can be partially switched off (heating element and selections disabled) also by simultaneously pressing the keys and for 3 seconds. To put the machine back in service press again the keys simultaneously for 3 seconds.

### 5. GRINDING AND DOSING COFFEE

Place the grinder-doser in a convenient place near the machine. Grinding and dosing of coffee must take place in accordance with the instructions of the manufacturer of the grinder-doser. To achieve good quality espresso coffee we suggest the following:

- Do not keep large amounts of coffee beans on hand. Observe the expiry date indicated by the producer.
- grind the volume of coffee based on use, place the amount the doser contains and if possible use it before the end of the day;
- if possible, never buy coffee that is already ground as it expires quickly. If necessary, buy it in small vacuum-sealed packages.

Fill the filter with a dose of ground coffee (circa 6-7 gr.) and press it with the press. Attach the filter holder to the dispensing group.

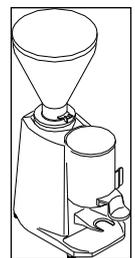

To prevent the seal wearing too soon clean the edge of the filter before engaging the filter holder on the dispensing unit. Do not excessively tighten the filter holder to the dispensing group.


## 6. COFFEE SELECTIONS

### 6.1 USE

- 1) Fill the filter with the dose of ground coffee and press it with the coffee press;
- 2) Attach the filter holder to the dispenser assembly;
- 3) Place the cup under the filter holder;
- 4) Select the desired serving, for example, 1 espresso coffee  (corresponding LED comes on) and wait for delivery to be completed.



To interrupt delivery ahead of time, press the PROG/STOP  key again or press the selected key again .  
If the push button panel is locked, use the manual delivery button.

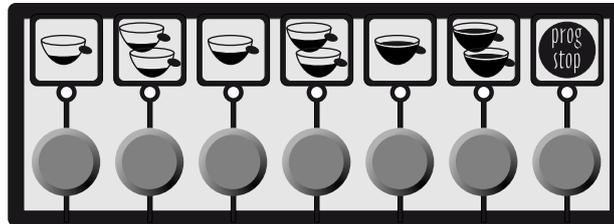

### 6.2 PROGRAMMING

Always program the left-hand push button panel first and then the others, if necessary, as follows:

- Turn the programming key to the **ON** position ( *P* flashes on the display);
- Fill the filter with the desired dose of ground coffee, press it with the coffee presser and attach the filter holder to the delivery group;
- Hold the PROG/STOP  key down for at least 5 seconds (all LED on the push button panel come on);
- Select the dose to be programmed (e.g. 1 medium coffee  );
- Wait for delivery to be carried out;
- To confirm the dose press the dose key again (e.g. 1 medium coffee  ) or the PROG/STOP  key.
- Repeat the operation for the other doses and for the other push button panels;
- To exit programming, press the PROG/STOP  key (the machine automatically exits programming if no selections are made for at least 25 seconds);
- Upon completion turn the programming key to the **OFF** position.




Programming of each dose must be carried out with ground coffee and not with previously used grounds.

## 7. DISPENSING HOT WATER

### 7.1 HOT WATER DISPENSING

- Put the cup under the hot water spout (2);
- press the hot water key (4) : wait for the delivery of water;
- to stop delivery in advance, press the hot water delivery key (4)  again or press the PROG/STOP  key.

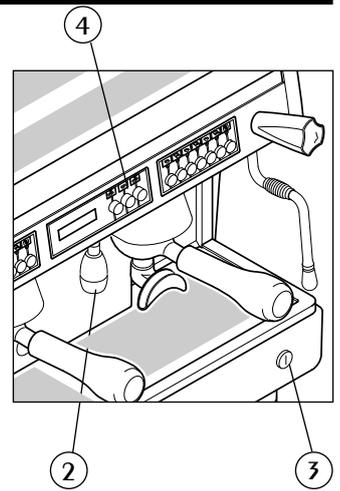

### 7.2 HOT WATER PROGRAMMING

- Turn the programming key (3) to **ON**;
- Put the cup under the hot water spout (2);
- press the PROG/STOP  key and all dose key LED will come on;
- press the hot water delivery key (4) ;
- when the desired dose has been attained, confirm by pressing the PROG/STOP  key,
- upon completion of programming, turn the programming key (3) back to the **OFF** position.



Do not touch the hot water nozzle: contact with the hot water and steam may be harmful to individuals, animals or property.

## 8. SELECTION COUNT

To view the sum of work performed by the machine, proceed as follows:

- 1) Turn the programming key to the **OFF** position;
- 2) Keep the PROG/STOP  key of the left push button panel pressed for at least 5 seconds until the display shows the total number of selections carried out;
- 3) By pressing the keys on the coffee selection push button panel or on the milk/cappuccino selections push button panel, it is possible to view the number of selections made with that key;
- 4) To exit automatically from selection counting, do not make any selections for at least 25 seconds.

TOTAL COFFEES  
000000

COUNTERS  
000000



To reset the counts see chap 15 - "Data resetting"

## 9. Cup HEATER

### 9.1 Use

- 1) Place the cups to be heated on the appropriate surface;
- 2) Place the cup heater switch in the **ON** position.



For safety reasons it is advisable not to place cloths or other objects on the cup heater surface to keep the machine from overheating.

### 9.2 Adjustment

To activate, de-activate or adjust the cup heater, place the cup heater switch located above the machine on switch in the **ON** position and proceed as follows:

- Turn the programming key to the **OFF** position;
- Keep the PROG/STOP  button pressed for at least 5 seconds;
- Repeatedly press the PROG/STOP  key until the display shows the message
- Use the keys  and  on the left push button panel to modify the temperature of the autsteamer shown on the display;
- keep the PROG/STOP  key pressed to confirm the operation;
- To exit programming, press the PROG/STOP  key (the machine automatically exits programming if no selections are made for at least 10 seconds).

CUP HEATER  
80°C




To deactivate the cup heater set a temperature lower than 70°C (the display shows ---- ) or turn the heater switch on **OFF** (placed above the turn on machine switch).

## 10. DS drink selection

### 10.1 Use


- 1) Insert the aspiration tube into the milk container;
- 2) For cappuccino, coffee and milk or milk with a shot of coffee, fill the filter with the dose of ground coffee and press it with the coffee press;
- 3) Attach the filter holder to the dispenser assembly;
- 4) Place the cup under the filter holder;
- 5) Select the desired serving and wait for completion of milk and coffee (the latter only for cappuccino, coffee and milk or milk with a shot of coffee).

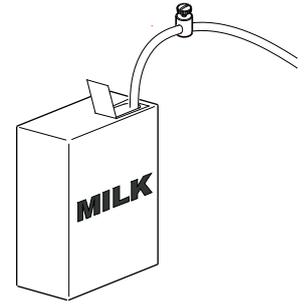

To stop delivery ahead of time, press the selected key again.

If the dose consists of coffee and milk, press the selected key repeatedly until the cycle is completely interrupted. For manual delivery of warm milk, press the key .

To interrupt dispensing of warm milk, press again the key .

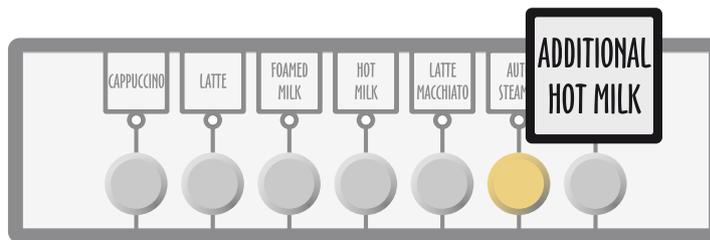

### 10.2 PROGRAMMING COFFEE DOSES


Program the milk selections push button panel in the following way:

- Turn the programming key to the **ON** position ( *P* flashes on the display);
- Hold the PROG/STOP  key down on the left push button panel for at least 5 seconds (all LED on the push button panels come on).

#### 10.2.1 PROGRAMMING CAPPUCCINO AND CAFFE LATTE

- Fill the filter with the desired dose of ground coffee, press it with the coffee presser and attach the filter holder to the delivery group;
- Select the dose to be programmed (e.g. cappuccino);
- Wait for milk delivery;
- To confirm the dose of milk, press the cappuccino key again.
- Wait for coffee delivery;
- To confirm the dose of coffee, press the cappuccino key again.

The amount of cream can be modified with the regulator (A) located under the upper grille. The sequence of delivery, be it first milk and then coffee or vice versa, is established in the machine programming phase (see chapter 14 "Programming machine parameters").

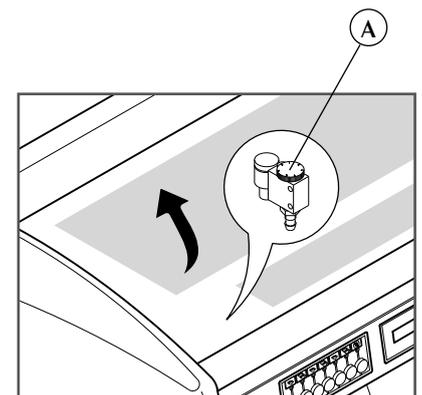

## 10.2.2 PROGRAMMING FOAMED MILK AND WARM

- Select the dose to be programmed (e.g. foamed milk);
- Wait for milk delivery;
- To confirm the dose, press the foamed milk key.

## 10.2.3 PROGRAMMING MILK WITH A SHOT OF COFFEE - COLD -

- Fill the filter with the desired dose of ground coffee, press it with the coffee presser and attach the filter holder to the delivery group;
- Select the button for milk with a shot of coffee;
- Wait for cold milk delivery;
- To confirm the dose of cold milk, press the key for milk with a shot of coffee again;
- Wait for delivery of warm milk with foam;
- To confirm the dose of warm milk with foam, press the key for milk with a shot of coffee again;
- Wait for coffee delivery;
- To confirm the dose of coffee, press the key for milk with a shot of coffee again.

## 10.2.4 PROGRAMMING MILK WITH A SHOT OF COFFEE - WARM -

- Fill the filter with the desired dose of ground coffee, press it with the coffee presser and attach the filter holder to the delivery group;
- Select the button for milk with a shot of coffee;
- Wait for delivery of warm milk without foam;
- To confirm the dose of warm milk without foam, press the key for milk with a shot of coffee again;
- Wait for the dispensing of warm milk with foam;
- To confirm the dose of warm milk with foam, press the key for milk with a shot of coffee again;
- Wait for a few seconds (advisably 15-20 seconds);
- To confirm the length of the pause, press the button for milk with a shot of coffee again;
- Wait for coffee delivery;
- To confirm the dose of coffee, press the key for milk with a shot of coffee again.



To configure the machine with MILK WITH SHOT OF COFFEE - WARM - or - COLD refer to chapter 14. When configuring the machine for the selection of MILK WITH SHOT OF COFFEE - WARM -, it will no longer be possible to deliver MILK WITH SHOT OF COFFEE - COLD - .

 

- To exit programming, press the PROG/STOP  key (the machine automatically exits programming if no selections are made for at least 25 seconds),
- Upon completion turn the programming key to the **OFF** position.

# 11. ASD AUTOMATIC STEAMER device


## 11.1 Use

The autosteamer system makes it possible to make the milk foamy and to bring it up to a programmable temperature.

- 1) Immerse the ends of the autosteamer into the beverage to be heated;
- 2) Press the autosteamer key;
- 3) Wait for steam delivery to be completed.

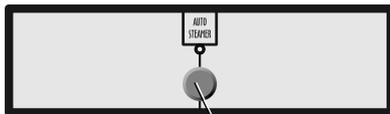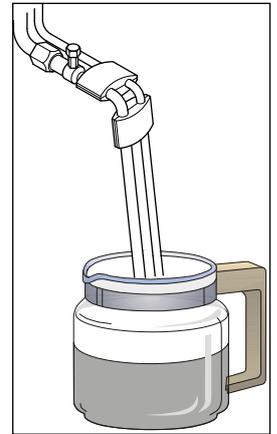

Key  
autosteamer

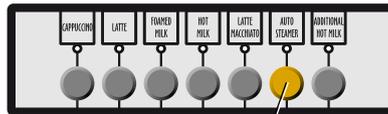 

Key  
autosteamer



To stop delivery ahead of time, press the selected key again. By holding down the autosteamer key it is possible to extend steam delivery beyond the set temperature.



To keep the steam dispensers in perfect working order, it is advisable to carry out a delivery dry run after each use.

Keep the ends of the autosteamer clean at all times by means of a cloth dampened in lukewarm water.

Use the utmost caution with the autosteamer, as high-temperature steam is present.

## 11.2 HEATING TEMPERATURE adjustment

To adjust the activation temperature of the autosteamer, proceed as follows:

- Turn the programming key to the **OFF** position;
- Hold down the key PROG/STOP  of the upper left hand push button panel for at least 5 seconds;
- Repeatedly press the PROG/STOP  key until the display shows the message
- Use the keys  and  to modify the temperature of the autosteamer shown on the display;
- keep the PROG/STOP  key pressed to confirm the operation.
- To exit programming, press the PROG/STOP  key (the machine automatically exits programming if no selections are made for at least 10 seconds).

AUTOSTEAMER  
65°C




To activate or deactivate autosteamer operation, see chapter 14, "Machine programming". The system includes a maximum operation time of 4 minutes for the autosteamer.

### 11.3 MILK FOAMING adjustment

To adjust milk foaming with the ASD system, proceed as follows:

- Use a wrench to unscrew component (A) of the ASD steam nozzle;
- Use a screwdriver on the screw (B) located inside the part:
  - to reduce foaming turn clockwise
  - to increase foaming turn counter-clockwise

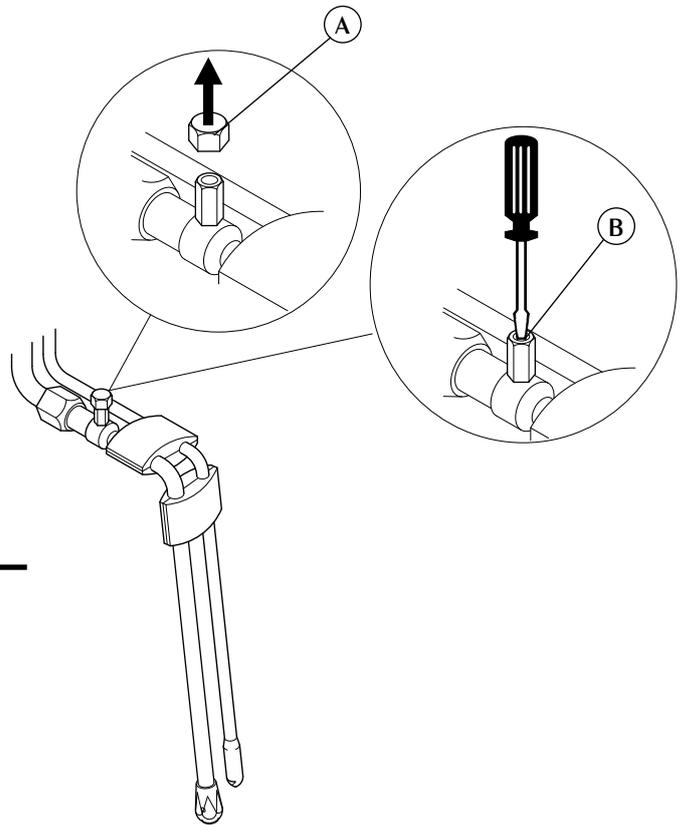

## 12. Boiler pressure

Function not active.

BOILER PRESSURE  
0,0 ATM 15=0,0

## 13. Washing

### 13.1 Washing requested


The machine periodically suggests washing the milk circuit and the cappuccino maker. This signal depends on the type of programming setting (see chapter 14). To carry out washing proceed as follows:

- 1) Place the milk tube in cold water;
- 2) Press the key  for three seconds (with programming key in the **OFF** position);
- 3) Wait for the washing cycle to be carried out (this takes roughly 30 seconds);

WASHING  
CAPPUCCINO MAKER

PUT MILK TUBES  
IN THE WATER

PRESS BUTTON  
"ADD. HOT MILK" 3 SEC.

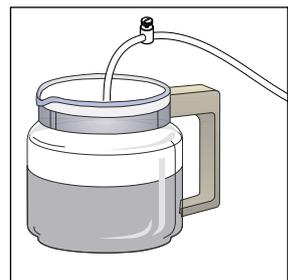

PUT MILK TUBES  
IN THE WATER

PRESS BUTTON  
"ADD. HOT MILK" 3 SEC.

### 13.2 Voluntary washing

To perform washing of the milk circuit and of the cappuccino maker at any time, proceed as follows:

- 1) Immerse the two milk tubes in cold water;
- 2) Press the key  for three seconds (with programming key in the **OFF** position);
- 3) Wait for the washing cycle to be carried out (this takes roughly 30 seconds);

ENGLISH  
DISPLAY - ASD/DS



To interrupt the washing cycle before it has finished press the PROG/STOP  button.  
To keep the cappuccino maker and its hydraulic circuit in perfect working order, it is advisable to perform washing regularly.  
Voluntary washing is possible only if the cappuccino maker has been enabled (see para. 14.11).

## 14. PROGRAMMING OF PARAMETERS OF THE MACHINE


- Turn the programming key to the **ON** position (*P* flashes on the display)
- Keep the MODE  key pressed for at least 3 seconds to have access to programming.
- To scroll through the various areas of the programming menu (see alongside) use the MODE  key.
- Use the ENTER  key to move from a parameter to the next one within the same area.
- To modify the value of each parameter, use the increase  and decrease  keys.



All machine programming keys refer to the left push button panel.



With the programming key in the **ON** position, the selections are not active.  
The system automatically exits the programming phase after about 20 seconds from the last operation carried out. When programming is finished, turn the programming key back on **OFF**.

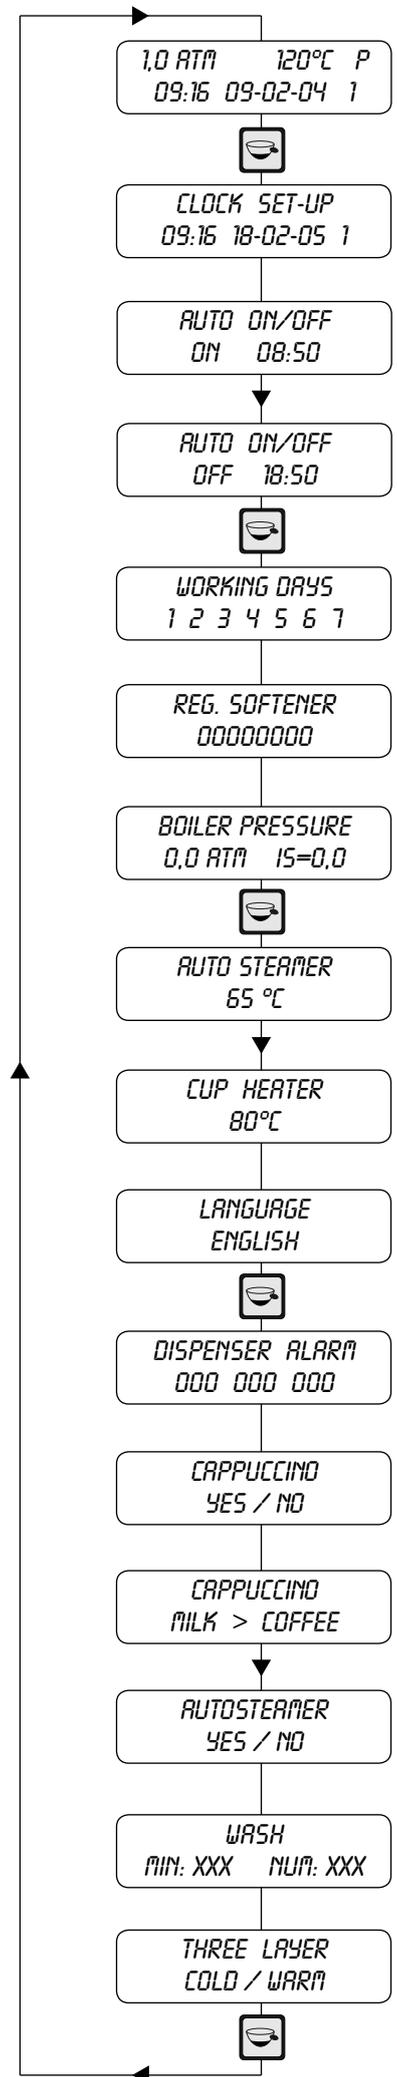

## 14.1 PROGRAMMING of CLOCK and DATE

Change of hour, date and day of :

- 1) Enter programming until showing on the display;
- 2) keep the MODE  key pressed for 3 seconds;
- 3) modify the parameter while flashing with the keys  and ;
- 4) to move to the next parameter press the key ENTER ;
- 5) to move to subsequent programming press the key MODE .



## 14.2 START-UP PROGRAMMING

Programming of the automatic switching on of the machine:

- 1) Enter programming until showing on the display;
- 2) set the machine start-up time with the keys  and ;
- 3) to move from hours to minutes and vice versa press the key ENTER ;
- 4) to move to the subsequent programming press the key MODE .
- 5) to deactivate the "Start-up" function, set the time to **00:00**.



## 14.3 SHUT DOWN PROGRAMMING

Programming of the automatic switching off of the machine:

- 1) Enter programming until showing on the display;
- 2) set the shutdown time of the machine with the keys  and ;
- 3) to move from hours to minutes and vice versa press the key ENTER ;
- 4) to move to the subsequent programming press the key MODE .
- 5) to deactivate the "Shut down" function, set the time to **00:00**.



## 14.4 REST DAY PROGRAMMING

To program machine shutdown for rest day(s), follow the instructions below:

- 1) Enter programming until showing on the display : 

Days of the week	1	2	3	4	5	6	7
	Monday	Tuesday	Wednes-	Thursday	Friday	Saturday	Sunday

### Shutdown

- 1) Choose the day(s) for shutdown by scrolling with the keys  and 
- 2) Use the key ENTER  to set the dash " - " at the day(s) of desired shutdown.

Example of machine shutdown on Tuesday and Thursday:



### Switching ON

To eliminate machine shutdown, use the ENTER  key to reset the numerical value of the day.

Example of machine with no days set for shutdown:



For days of the week in which the "Rest day" function has been activated " - " the machine will remain off.

## 14.5 WATER SOFTENER REGENERATION PROGRAMMING

Programming of the automatic warning of water softener regeneration:

- 1) Enter programming until showing on the display;
- 2) set the amount of water (steps of 50 litres) with the keys  and ;
- 3) to move to the subsequent programming press the key MODE .



When the machine reaches 90% of the value set on the display a signal appears for 5 seconds. When the machine reaches 100% of the value set on the display a blinking signal appears.

To eliminate the blinking signal and reset the count of the litres of water to zero, with the programming key in the **ON** position press the     4 keys of the left push button panel simultaneously until the display shows the message "CLOCK SET UP". The regeneration control is bypassed by setting a value equal to 00 litres.

## 14.6 BOILER PRESSURE PROGRAMMING

Service not active.



## 14.7 AUTOSTEAMER TEMPERATURE PROGRAMMING

Programming the activation temperature of the autosteamer:

- 1) Enter programming until showing on the display;
- 2) set the temperature with the keys  and  of the left push button panel;
- 3) to move to the subsequent programming press the key MODE .



The actual temperature of the beverage may differ by a few degrees from the set temperature depending on the amount of the beverage heated.

## 14.8 CUP HEATER PROGRAMMING

Temperature programming and activation of cup heater:

- 1) Enter programming until showing on the display;
- 2) set the temperature (70-100°C) with the keys  and .
- 3) press the MODE  key to move on to the next programming.



## 14.9 LANGUAGE PROGRAMMING

Programming of the language displayed:


- 1) Enter programming until showing on the display;
- 2) set the language with the keys  and ;
- 3) to move to the subsequent programming press the key MODE .



In English it is possible to choose between degrees Celsius (°C) and Fahrenheit (°F)

## 14.10 DOSERS ALARM

Control of the dispensers alarm. The 3 values displayed correspond to the delivery groups.

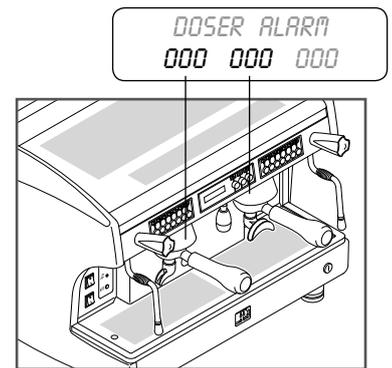


## 14.11 CAPPUCCINO MAKER ACTIVATION

Activation or de-activation of the DS MILK SELECTION PUSH BUTTON PANEL.

- 1) Active or de-activate the operation of the push button panel with the keys keys  and ,
- 2) press the MODE  key to move on to the next programming.



Setting *NO* bypasses the operation of the DS system (Drink Selection push button panel), (Automatic Steamer Device push button panel, see alongside).

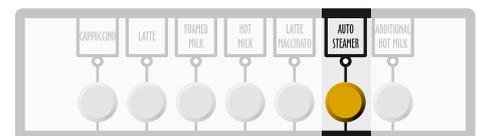

## 14.12 SETTING OF CAPPUCCINO SEQUENCE (only with CAPPUCCINO MAKER ENABLED)

Programming for the CAPPUCCINO and MILK AND COFFEE selections of the milk selection push button panel.

- 1) Enter programming until showing on the display;
- 2) With the keys  and  it is possible to set the dispensing sequence of milk and coffee as per the following rule:
  - *COFFEE > MILK* first coffee, then milk
  - *MILK > COFFEE* milk is delivered first, then coffee
  - *COFFEE + MILK* simultaneous delivery of coffee and milk
- 3) press the MODE  key to move on to the next programming.



## 14.13 AUTOSTEAMER ACTIVATION (ASD)

Activation or de-activation of the AUTOSTEAMER (ASD) selection on the DS push button panel.

- 1) Active or de-activate the operation of the autosteamer with the keys  and ,
- 2) press the MODE  key to move on to the next programming



## 14.14 PROGRAMMING of WASHING (only with cappuccino maker enabled)

Programming the request to carry out WASHING of the milk circuit and cappuccino maker.

- 1) Enter programming until showing on the display;
- 2) use the keys  and  to program the time in xxx minutes since last milk dispensing;
- 3) as an alternative, press the key ENTER  and program the number of milk deliveries *yyy* with the keys  and  after which the running of a wash cycle will be requested;
- 4) Press the MODE  key to move on to the next programming.



It is advisable to program only one of the two factors, setting a time or a number of selections, so as to avoid having an excessive number of requests of the machine.

## 14.15 CONFIGURATION of MILK WITH A SHOT OF COFFEE -COLD OR -HOT-

To configure the machine proceed as follows:

 
- 1) Enter programming until showing on the display;
- 2) set the type of delivery for milk with a shot of coffee, cold or hot with the keys  and ,
- 3) to go back to the top of the menu press the MODE  key.



# 15. AZZERAMENTO DATI


## 15.1 AZZERAMENTO ALLARMI DOSATORI

- 1) Posizionare la chiave di programmazione in **ON** ;
- 2) con il tasto MODE  scroll the menu until the dispenser alarms;
- 3) to start resetting press the key  ;
- 4) to confirm resetting press the key  for 3 seconds.

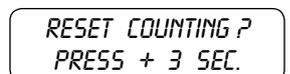

## 15.2 RESETTING SELECTION COUNT TO ZERO

- 1) Place the programming key in the OFF position ;
- 2) hold down the key PROG/STOP  of the left push button panel for 5 seconds;
- 3) place the programming key in the **ON** position ;
- 4) to start resetting press the key ;
- 5) to confirm resetting press the key  for 3 seconds.

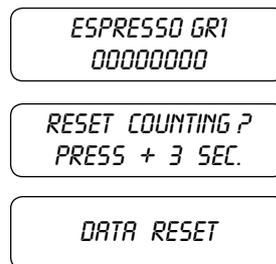

The procedure described above makes it possible to reset the counts of the single selections (group 1-2-3, milk selections), but not to reset the machine completely (machine life cycle). Only the selections that use coffee, of the milk selections push button panel, will increase the total count of the machine.

## 15.3 RESET OF WATER LITRES COUNT FOR SOFTENER REGENERATION

- 1) Turn the programming switch to **ON**;
- 2) Simultaneously press the 4 keys PROG     of the left push button panel until the display shows the signal.
- 3) to bypass regeneration control, set a value of **00** litres.



## 16. SIGNALS

	cause	solution
	Boiler filled with water when using the machine for the first time or when refilling to reach the water level.	Wait for the boiler to be completely filled.
	Time for filling the boiler with water longer than expected.	Make sure the water mains cock is opened. Switch the machine off and back on again. If the warning is still on after a few attempts, call Technical Assistance.
	Fault of the volumetric electronic control	Stop delivery by pressing the dose key. Call the Technical Assistance.
	Water softener regeneration request	Carry out the water softener regeneration. To put off the warning turn the programming switch on ON and press simultaneously the 4 display keys     for 5 seconds



If the machine will not work call technical assistance.





**C.M.A. S.p.A.**

Via Condotti Bardini, 1 - 31058 SUSEGANA (TV) - ITALY  
Tel. +39.0438.6615 - Fax +39.0438.60657  
[www.maspa.com](http://www.maspa.com) - [cma@maspa.com](mailto:cma@maspa.com)

Cod. 02000248 - Rev. 00 - 07/2006