


QUICK GUIDE

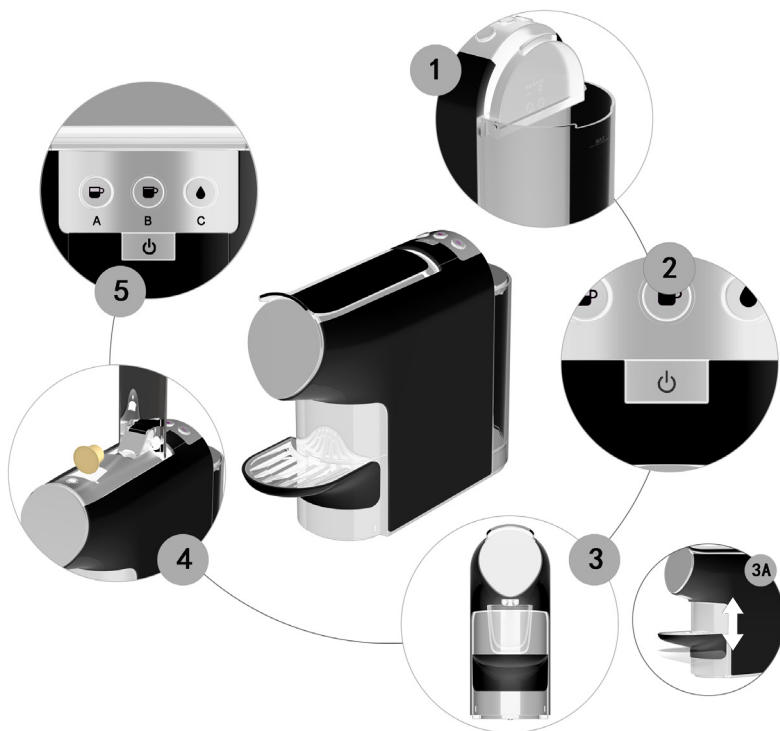

- 1 FILL THE WATER TANK :**
Fill the water tank with fresh drinking water (600ml max).
- 2 CONNECT POWER AND SWITCH ON THE APPLIANCE:**
Connect the power plug to an earthed socket.
Press the ON/OFF button to switch on the machine. The coffee- and hot water buttons LEDs start blinking, indicating that the machine is heating up (approx. 30 seconds). The appliance is ready to use when the LEDs are permanently lit.
- 3 ADJUST THE CUP TRAY HEIGHT:**
3A: Move the tray up, down or remove, according to your cup size.
Place a cup suitable for your desired beverage onto the cup tray.
- 4 INSERT THE CAPSULE:**
Open the handle and insert the capsule.
Close the handle.
- 5 START THE BEVERAGE:**
Press the desired drink selection button:
5A: ESPRESSO: Espresso selection button.
5B: LUNGO: Lungo selection button.
5C: HOT WATER: Hot water selection button.

The brewing process stops automatically when completed.
Open the handle to eject the used capsule into the waste container.

SAFETY PRECAUTIONS

Read these instructions carefully before using your new coffee machine for the first time. Keep these precautions in a place where you can find and refer to them later on.

- In case of an emergency: immediately remove the plug from the power socket.
- Children can never use the appliance without close adult supervision.
- Check if the voltage stated on the rating plate is the same as your mains voltage.
- Connect your appliance only to an earthed power sockets. The use of incorrect connections voids the warranty.
- Before cleaning and servicing, remove the plug from the main socket and let the machine cool down.
- Never immerse the machine, cable, or power plug in water or any liquid.
- Keep the power cable out of children's reach.
- Never leave the cable near or in contact with hot parts of the machine, a source of heat, or sharp edges.
- Never place the machine on a hot surface, e.g. a heating plate.
- Never use it in the close vicinity of an open flame.
- Place the machine on a flat, stable, heat resistant surface away from water splashes.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons to avoid hazards of using sub-standard power cords.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- CHILDREN SHOULD BE TOLD OF THE DANGER, AND MUST NOT PLAY WITH THE APPLIANCE.



IMPORTANT: For handling, cleaning and maintenance instructions, please find the operator manual on www.jacobsdouweegbertsprofessional.support/singleserve.