



**3A-C279**

**Professional Mini Coffee Appliance**

TECHNICAL SPECIFICATIONS

Model	3A-C279
Voltage	220-240V, 50/60Hz
Power	1200W
Safety grade	Class I
Water tank capacity	600 ml
Weight	3.1 Kg
Size (mm)	L340 x W100 x H425
Box size (mm)	L375 x W145 x H305
Minimum operation height (mm)	375



**NingBo AAA Group Electric Appliance Co., Ltd.**  
NO.158 KAIFA ROAD(EAST), ZHOUXIANG TOWN, CIXI CITY, ZHEJIANG PROVINCE CHINA

## **SAFETY PRECAUTIONS**

**Read these instructions carefully before using your new coffee machine for the first time.**

Keep them in a place where you can find and refer to them later on.

- In case of an emergency: immediately remove the plug from the power socket.
- Children can never use the appliance with out close adult supervision.
- Check voltage stated on the rating plate is the same as your mains voltage.
- Connect your appliance only to an earthed power sockets.

The use of incorrect connections voids the warranty!


- The machine is for use in hotel rooms only.
- Before cleaning and servicing, remove the plug from the main socket and let the machine cool down.
- Never immerse the machine, cable, or plug in water or any liquid.
- Keep the cable out of children's reach.
- Never leave the cable near or in contact with hot parts of the machine, a source of heat, or a sharp edge.
- Never place the machine on a hot surface, e.g. a heating plate. Never use it right next to an open flame.
- Place the machine on a flat, stable, heat resistant surface away from water splashes.
- If the power supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons to avoid hazards of using sub-standard power cords.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

**CHILDREN SHOULD BE TOLD OF THE DANGER AND MUST NOT PLAY WITH THE APPLIANCE.**

## GETTING TO KNOW YOUR ESPRESSO CAPSULE COFFEE MAKER

1. Control panel
2. Water tank cover
3. Water tank
4. Side panel
5. Power cord
6. Lever
7. Capsule window
8. Front panel
9. Used capsule container
10. Cup tray
11. Drip tray

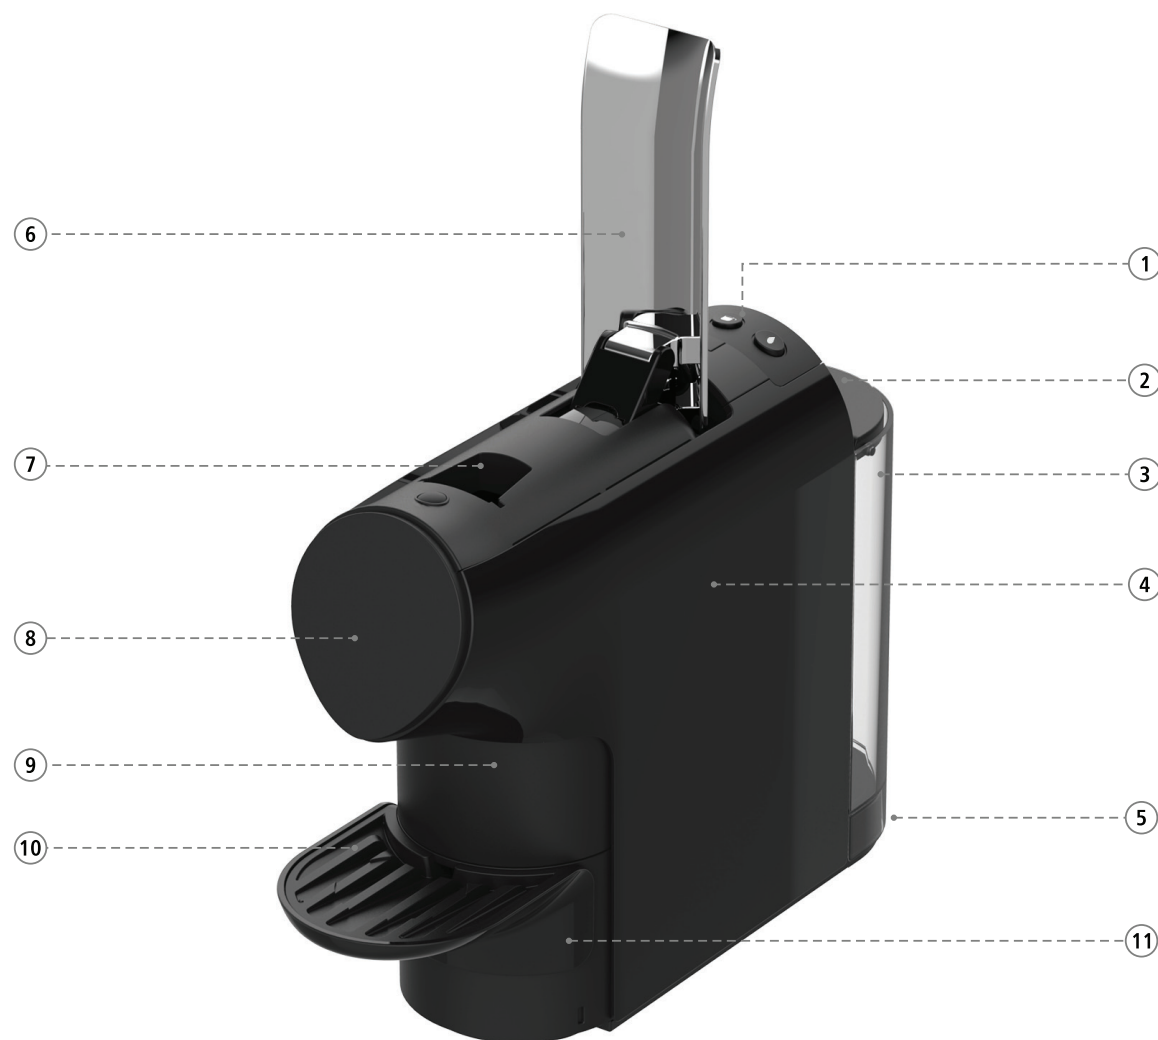

**Fig. 1:** Components

1. Espresso button
2. Lungo button
3. Hot water button
4. On/Off button




**Fig. 2:** Control panel


## USING YOUR ESPRESSO COFFEE MAKER

Using the espresso coffee maker for the first time or after a longer period of non-use.


- Confirm that no accessories are missing and the equipment has not been damaged.  
Remove all the protective stickers from the machine components and clean the interior parts.
- Place the machine on a flat and stable surface.
- Take out the water tank and fill water for approximately 600 ml (Fig. 3).
- Slot the filled water tank back to the machine (Fig. 4).
- Adjust the cup tray and put the cup on the cup tray (Fig. 5A/ Fig. 5B).
- Take out the plug cable from cable storage as your need and put it into socket outlet (Fig. 6).

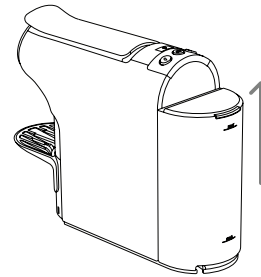


**Fig. 3.** Removing the water tank and filling with water.

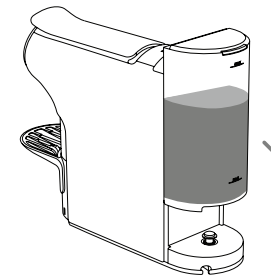


**Fig. 4.** Putting the water tank in the machine.

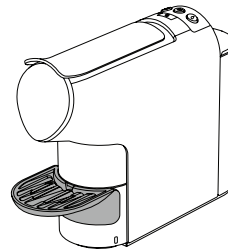

**Fig. 5A.** Adjusting the cup tray: small cup

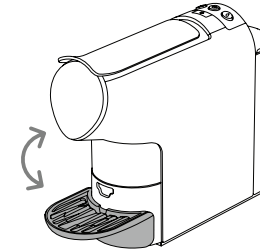

**Fig. 5B.** Adjusting the cup tray: big cup

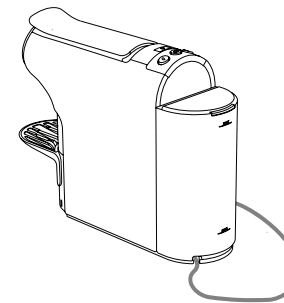

**Fig.6.** Connect the machine to an electrical outlet

## GETTING READY

- Press the power button to activate the machine (Fig. 7).  
The lights are blinking orange, indicating that the machine is preheating.  
When the lights become steady orange, it means the machine is ready to use.
- Place a cup on the cup tray (Fig. 8) and press first the espresso/lungo/ button. and thereafter the hot water button (Fig.10). The machine starts to pump water through the extraction nozzle. The preparation will stop automatically.


The espresso capsule coffee maker is now ready to use.

## BREWING A COFFEE


- Place a cup on the cup tray (Fig.8) and after open the lever, put one capsule into the capsule window (Fig.9).
- Press the power button, all lights will be steady (Fig. 7).
- Press the espresso/ lungo/ hot water button (Fig.10).
- The coffee or hot water will come out from nozzle and will stop automatically.
  - Espresso volume is around 40 ml.
  - Lungo volume is around 110 ml.
  - Hot water volume is around 120 ml.




**Fig. 7:** Switching the machine ON..

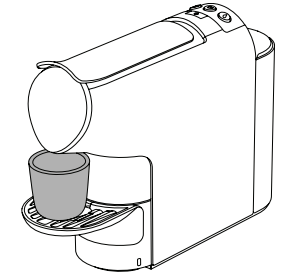

**Fig. 8.** Placing a cup on the cup tray.

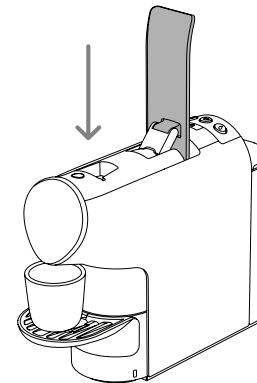


**Fig. 9.** Placing a capsule.

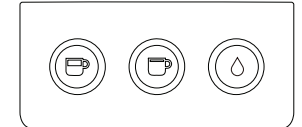

**Fig.10.** Making coffee/ hot water.

- Take out the used capsules container and empty it after every 8-10 brews (Fig.11). After the brewing, clean with water the used capsules container, the cup tray and the drip tray.
- Take out the power cord from the socket out let and place the machine in a dry environment.

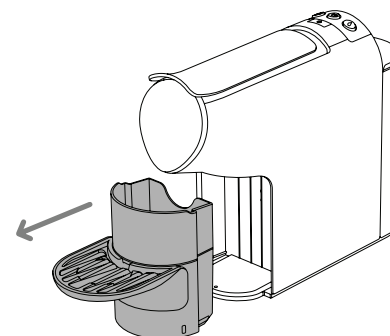



**Fig. 11.** Used capsule container full



## INSTRUCTIONS FOR USE



**READ THESE INSTRUCTIONS CAREFULLY. BECAUSE THEY CONTAIN IMPORTANT INFORMATION ABOUT SAFETY OF INSTALLATION, USE AND MAINTENANCE. KEEP THIS BOOKLET CAREFULLY FOR CONSULTING EVERY TIME YOU NEED IT.**

- Before using, check that the mechanical and other parts of the machine are intact. The body of the machine, water tank cover, tank and brewing unit must never be broken or cracked. The sheath and plug of the power cord must never be cracked or broken. If this should occur, disconnect the plug immediately and take the machine to an authorized dealer for checking.
  - It is advisable to power the machine using a contact breaker (RCD) with operating current no higher than 30 mA.
  - Keep the power cord out of the reach of children .
  - Make sure the machine is turned off before plugging it into the socket outlet. The electrical safety of this machine is only assured when it is connected to an efficient earth system, in accordance with the safety regulations in force. Have this important requirement checked by a qualified person. The manufacturer can not be held responsible for damage caused by lack of an earth.
  - Before plugging in the machine, make sure that the electric power supply is the same as that of the machine.
  - Flying leads or non-approved extensions must not be used for supplying electricity to the machine.
  - Before using the machine, remove all protective films from the outside walls of its body.
  - The first time the machine is used there might be some smell caused by the insulating materials and the heating elements. This disappears after a few minutes.
-  Do not leave the machine without water in the tank.
- Never immerse the machine, power cord and plug in water or other liquids.
  - Keep the power cord away from the hot parts of the machine.
  - While in operation, the power plug must always be easy to get at in case the machine has to be disconnected. Do not disconnect the machine by pulling the power cord.
  - Do not move the machine while it is working.
  - Do not leave the machine while it is working.
  - Do not use or put the machine outdoors or near water.
-  Do not leave the machine in rooms where the temperature is 0°C or lower. If you are planning not to use the machine for a fairly long time, leave no water in the tank.

- This machine must never be used by children, invalids, etc. except under strict supervision, nor in any case by people that have not been properly instructed about how to use it and about the dangers of improper use.
- Do not use the machine with bare feet and wet hands.
- Always unplug the power plug before cleaning the machine and before doing any kind of work on it.

## USER SAFETY: UNPACKING AND PLACEMENT

- Remove the machine from its packing and check that all the parts are there and are not broken.
- Place the machine on a flat, even, stable, heat-resistant surface, strong enough to bear its weight.
- Do not install or use the machine near curtains or other flammable material and do not place anything on top of it during use.
- Do not place the machine on top of, or close to, additional oven or other equipment that generates heat (for instance, radiators, etc.)
- **Make sure there is enough space around the machine for proper ventilation.**



**PACKAGING MATERIALS (CARDBOARD, CELLOPHANE, METAL STAPLES, ETC.) COULD CUT OR CAUSE INJURY IF NOT HANDLED CAREFULLY OR IF USED INCORRECTLY. KEEP THEM OUT OF THE REACH OF CHILDREN OR UNSKILLED PERSONS.**

## HOW TO USE THE MACHINE

This machine is designed for making coffee/ hot water, solely for household use. It must not be used for other purposes and must not be altered or tampered with for any reason.

Use for any other purpose is considered improper and therefore dangerous. The manufacturer cannot be held responsible for any damages resulting from improper erroneous or unreasonable use.

- Do not touch the hot parts (coffee nozzle) during using the machine.
- While brewing coffee/ hot water beware of possible splashes of hot coffee/water.
- Do not open main lever while brewing coffee/ hot water.

## REGULATIONS

The manufacturer states that the product referred to in this booklet was manufactured in compliance with the Community Directives as shown in the declaration of conformity attached to this booklet.

## PREPARING THE MACHINE

### WATER FILLING

Remove the water tank and pour cold water into the tank (maximum 600 ml), then close the water tank cover (Fig.3 and Fig.4).

### PREPARE FOR BREWING

Adjust the cup tray and put the cup on the cup tray (Fig. 5A and Fig. 5B)  
Connect the machine to the electricity by inserting the plug (Fig. 6) in the socket.

## **TURN ON THE MACHINE**

Press the power button to turn on the machine. The machine will be in preheated mode at the same time.

## **TURN OFF THE MACHINE**

Press the power button again, the machine will be off.

## **PROGRAMMING THE WATER VOLUME**

Insert a capsule, close the lever and press the button of the drink that you'd like to re-program.

Keep this button pressed for at least 3 seconds, then release it.

The drink is being prepared, press the same button again once the desired drink volume has been dispensed.

This volume is now stored as default drink value for that button.

## **RESET THE FACTORY DEFAULT**

Press the espresso / lungo button over 3 seconds, the related button will blink 3 times, it means that the machine is running to the factory default.

## **STAND BY**

Whenever the machine is inactive for more than 9 minutes, it enters automatically in stand-by mode to save energy consumption, the lights will be off.

## **DESCALING**

**It is advisable to descale the machine yearly, depending on the frequency of use and the mineral content of the water.**

Descal using commercial descaling agent recommended for espresso coffee makers, or use water with vinegar as follows:

- Fill the water tank with recommended JDE premix part# 55119528 or 5% vinegar solution.
- Without inserting any capsules, press and hold the espresso/ lungo/hot water extraction button for 3 seconds at the same time. The button's light is blinking and the liquid is extracting automatically.  
This indicates the machine is in the descaling mode.(The extracting stops automatically while the liquid is up to 160 ml +/-15%)
- After that, rinse the water tank and let or 2 tanks of fresh water flow through the brew head until there is no more smell of the descaling agent.

Note: This operation may be dangerous if other substance are used instead of JDE approved de-scaling materials recommended for household coffee makers.

## **CLEANING**

- Use a damp cloth to clean the body of the machine and do not use abrasive detergents
- Remove the used capsule container, the cup tray and the drip tray (Fig. 1 - 9 to 11).
- Empty any capsules and wash them with a mild non-abrasive cleaning agent.
- Periodically remove the water tank (Fig. 1 - 3) and rinse it with clean water then put it back properly in its place.

## TROUBLESHOOTING

If the machine is not working properly make the simple checks set out below. If the problem is not among those listed or if it still persists, even if you follow the advice given, contact an authorized dealer.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Espresso coffee maker won't start.	Not properly plugged into the power	Make sure that the espresso coffee maker is properly plugged in.
The coffee is too cold.	The machine is not ready to use.	If the machine does not react on pressing a drink button it needs to pre-heat. Please wait approx 35 seconds until all buttons are permanently lit. Then make your selection.
Coffee is not being dispensed or it is being done to slowly.	Not enough water in the tank.	Make sure that the water level in the tank is right and if necessary add (cold) fresh drinking water.
The drink volume is incorrect.	The drink volume is not set correctly.	Adjust the volume to the desired volume. See instructions on page 11 " Programming the water volume."
The lever does not close or open properly.	The empty capsule bin might be full.	Please empty the bin before continuing.
The machine just makes noise and does not deliver the right drink volume.	The water tank might be empty.	If the tank is empty: remove it, refill and replace

## DISASSEMBLY

Taking the machine out of use must be done by authorized staff. The pressure of the water circuit must be fully lowered; the power cord disconnected and any substances potentially harmful to the environment must be disposed of legally and properly.

Keep the machine out of the reach of children or unqualified persons.

If the machine is to be disposed as waste, it must be taken to a centre authorized for recycling electrical and electronic equipment (\*). This is to protect the environment and humans from any possible harm.

For more information about recycling please contact the offices of the municipality concerned, the domestic waste disposal service or the retailer. Do not dispose of the material in the environment.



Label affixed to the machine as identification according to Directive RAEE/WEEE (2 002/06 / (\*) EC) on Waste Electrical and Electronic Equipment destined for the European Market.

## ADDITIONAL WARNINGS

If the plug of the machine does not fit into the socket have the plug changed by a qualified person who should also make sure that the section of the wires of the plug are suitable for the power absorbed by the machine.

The use of adaptors, multiple sockets and/or extension cords is not advised.

If they have to be used it is necessary to use only simple or multiple adaptors and extension cords compliant with the safety regulations in force and to make sure the capacity limit is not exceeded. There are basic rules to be observed when using electrical equipment. In particular:

- Do not touch or use the equipment with wet or damp hands or in bare feet;
- Do not pull on the power lead or the equipment itself for unplugging it;
- Do not allow the equipment be used by children or unskilled persons without supervision .

If the machine is broken or not working properly, shut it off and do not tamper with it. If repairs are needed, only go to an authorised dealer. Non-compliance with the foregoing could affect the safety of the machine.

If you decide not to use the machine any more, you must put it out of commission by cutting the power cord, after unplugging the plug from the socket. It is also advisable to make safe any parts of the machine that could be a danger, especially for children who might play with the unused machine.

Installation must be done according to the manufacturer's instructions. Improper installation can cause harm to persons, animals or things, for which the manufacturer cannot be held responsible.

To avoid dangerous overheating, it is advisable to unwind the whole power cord and only to use the machine as advised in the "Instructions for Use" section.

If the power cord of the machine is damaged it must only be replaced by the authorized dealer.

The manufacturer cannot be held responsible for any harm to persons, animals or things arising from improper and unreasonable use of the machine and for repairs done by unqualified persons.

**Distributed by**

**NingBo AAA Group Electric Appliance Co., Ltd.**

NO.158 KAIFA ROAD(EAST), ZHOUXIANG TOWN, CIXI CITY, ZHEJIANG PROVINCE CHINA